KV-13V50
RM-Y116

SERVICE MANUAL

US Model
Chassis No. SCC-F78H-A
Canadian Model
Chassis No. SCC-F79G-A

RM-Y116

BA-1 CHASSIS

MODELS OF THE SAME SERIES	
KV-13V50	KV-20TS29/20TS32
KV-20V50	KV-21STR2/2170RS
KV-20TS50	KV-20TR23/2160WR/2150R

SPECIFICATIONS

Television system	American TV standards
Channel coverage	VHF: 2-13 UHF: 14-69 CABLE TV: 1-125
Picture tube	Hi-Black Trinitron® tube 13-inch picture measured diagonally 14-inch picture tube measured diagonally
Antenna	75 ohm external antenna terminal for VHF/UHF
Input	VIDEO Video (phono jacks): 1 Vp-p, 75-ohms unbalanced, sync negative Audio (phono jacks): 500 mVrms (100% modulation) Impedance: 47 kilo-ohms
Speaker output	2W×2
Speaker size	Full range 50×90 mm (2×3 5/8 in.)×2
Audio frequency response	50Hz-20kHz
Power requirements	120 V AC, 60Hz
Power consumption	90W
Standby mode	4W
Dimensions (w/h/d)	406×342×404 mm (15 1/2×13 1/2×16 inches)
Weight	11.7 kg (25 lbs 13 oz)
Supplied accessories	Remote Commander RM-Y116 (1) with 2 size AA (R6) EVEREADY batteries Dipole antenna (1) Antenna connector (1)
Recommended accessories	U/V mixer EAC-66 Connecting cable VMC-810S/820S, VMC-720M YC-15V/30V, RK-74A

Design and specifications are subject to change without notice.

MICROFILM

TRINITRON® COLOR TV
SONY®

Downloaded from www.Manualslib.com manuals search engine

TABLE OF CONTENTS

Section	Title	Page
1	GENERAL	
1-1	Introducting the Sony Trinitron® Color TV	4
1-2	Locating the Controls	4
1-3	Using the ON-SCREEN Menus	6
1-4.	Turning the Cable Mode ON or OFF	7
1-5	Presetting TV Channels	7
1-6	Connecting Other Equipment	9
1-7	Watching TV Programs	10
1-8	Using Convenient Features	10
1-9	Using Closed Caption	11
1-10	Adjusting Picture and Sound Quality	11
1-11	Using the Timer-Activated Functions	12
1-12	Customizing the Screen Display	15
1-13	Troubleshooting	17
2	DISASSEMBLY	
2-1	Rear Cover Removal	18
2-2	Service Position	18
2-3	Picture Tube Removal	19
3	SET-UP ADJUSTMENTS	
3-1	Beam Landing	20
3-2	Convergence	21
3-3	Focus	23
3-4	Screen (G2)	23
3-5	Method of Setting the Service Adjustment Mode	23
3-6	White Balance Adjustments	23
4	SAFETY RELATED ADJUSTMENTS	24
5	CIRCUIT ADJUSTMENTS	
5-1	Electrical Adjustment by Remote Commander	26
5-2	A Board Adjustments	28
6.	DIAGRAMS	
6-1	Block Diagram	31
6-2	Circuit Boards Location	35
6-3	Printed Wiring Boards and Schematic Diagrams	35
	• A Board	36
	• S, G, C Boards	43
6-4	Semiconductors	50
7	EXPLODED VIEW	
7-1	Chassis	51
8	ELECTRICAL PARTS LIST	52

WARNING!!

AN ISOLATION TRANSFORMER SHOULD BE USED DURING ANY SERVICE TO AVOID POSSIBLE SHOCK HAZARD, BECAUSE OF LIVE CHASSIS.
THE CHASSIS OF THIS RECEIVER IS DIRECTLY CONNECTED TO THE AC POWER LINE.

SAFETY-RELATED COMPONENT WARNING !!

COMPONENTS IDENTIFIED BY SHADING AND MARK ⚠ ON THE SCHEMATIC DIAGRAMS, EXPLODED VIEWS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY. CIRCUIT ADJUSTMENTS THAT ARE CRITICAL TO SAFE OPERATION ARE IDENTIFIED IN THIS MANUAL. FOLLOW THESE PROCEDURES WHENEVER CRITICAL COMPONENTS ARE REPLACED OR IMPROPER OPERATION IS SUSPECTED.

ATTENTION!!

AFIN D'EVITER TOUT RISQUE D'ELECTROCUTION PROVENANT D'UN CHÁSSIS SOUS TENSION, UN TRANSFORMATEUR D'ISOLEMENT DOIT ETRE UTILISÉ LORS DE TOUT DÉPANNAGE.
LE CHÁSSIS DE CE RÉCEPTEUR EST DIRECTEMENT RACCORDÉ Á L'ALIMENTATION SECTEUR.

ATTENTION AUX COMPOSANTS RELATIFS ÁLA SÉCURITÉ!!

LES COMPOSANTS IDENTIFIÉS PAR UNE TRAME ET PAR UNE MAPQUE ⚠ SUR LES SCHÉMAS DE PRINCIPE, LES VUES EXPLOSÉES ET LES LISTES DE PIECES CONT D'UNE IMPORTANCE CRITIQUE POUR LA SÉCURITÉ DU FONCTIONNEMENT. NE LES REMPLACER QUE PAR DES COMPOSANTS SONY DONT LE NUMÉRO DE PIÉCE EST INDIQUÉ DANS LE PRÉSENT MANUEL OU DANS DES SUPPLÉMENTS PUBLIÉS PAR SONY. LES RÉGLAGES DE CIRCUIT DONT L'IMPORTANCE EST CRITIQUE POUR LA SÉCURITÉ DU FONCTIONNEMENT SONT IDENTIFIES DANS LE PRÉSENT MANUEL. SUIVRE CES PROCÉDURES LORS DE CHAQUE REMPLACEMENT DE COMPOSANTS CRITIQUES, OU LORSQU'UN MAUVAIS FONCTIONNEMENT EST SUSPECTÉ.

Downloaded from www.Manualslib.com manuals search engine

SAFETY CHECK-OUT

(US Model only)

After correcting the original service problem, perform the following safety checks before releasing the set to the customer

1. Check the area of your repair for unsoldered or poorly-soldered connections. Check the entire board surface for solder splashes and bridges

2. Check the interboard wiring to ensure that no wires are "pinched" or contact high-wattage resistors

3. Check that all control knobs, shields, covers, ground straps, and mounting hardware have been replaced. Be absolutely certain that you have replaced all the insulators

4. Look for unauthorized replacement parts, particularly transistors, that were installed during a previous repair Point them out to the customer and recommend their replacement.

5. Look for parts which, though functioning, show obvious signs of deterioration. Point them out to the customer and recommend their replacement.

6. Check the line cord for cracks and abrasion. Recommend the replacement of any such line cord to the customer.

7. Check the condition of the monopole antenna (if any) Make sure the end is not broken off, and has the plastic cap on it. Point out the danger of impalement on a broken antenna to the customer, and recommend the antenna's replacement.

8. Check the B+ and HV to see they are at the values specified. Make sure your instruments are accurate; be suspicious of your HV meter if sets always have low HV.

9. Check the antenna terminals, metal trim, "metallized" knobs, screws, and all other exposed metal parts for AC leakage. Check leakage as described below.

LEAKAGE

The AC leakage from any exposed metal part to earth ground and from all exposed metal parts to any exposed metal part having a return to chassis, must not exceed 0 5 mA (500 microampers). Leakage current can be measured by any one of three methods.

1 A commercial leakage tester, such as the Simpson 229 or RCA WT-540A Follow the manufacturers' instructions to use these instruments

2. A battery-operated AC milliammeter The Data Precision 245 digital multimeter is suitable for this job

3. Measuring the voltage drop across a resistor by means of a VOM or battery-operated AC voltmeter The "limit" indication is 0 75 V, so analog meters must have an accurate low-voltage scale The Simpson 250 and Sanwa SH-63Trd are examples of a passive VOM that is suitable. Nearly all battery operated digital multimeters that have a 2V AC range are suitable. (See Fig. A)

HOW TO FIND A GOOD EARTH GROUND

A cold-water pipe is guaranteed earth ground, the cover-plate retaining screw on most AC outlet boxes is also at earth ground If the retaining screw is to be used as your earth-ground, verify that it is at ground by measuring the resistance between it and a coldwater pipe with an ohmmeter The reading should be zero ohms If a cold-water pipe is not accessible, connect a 60-100 watts trouble light (not a neon lamp) between the hot side of the receptacle and the retaining screw. Try both slots, if necessary, to locate the hot side of the line, the lamp should light at normal brilliance if the screw is at ground potential (See Fig. B)

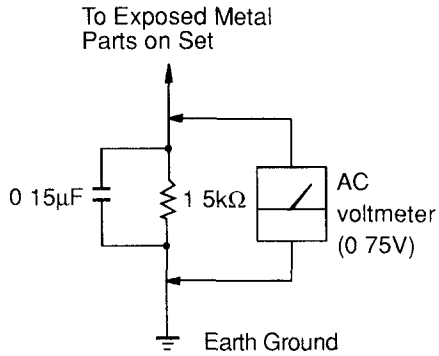

Fig A Using an AC voltmeter to check AC leakage

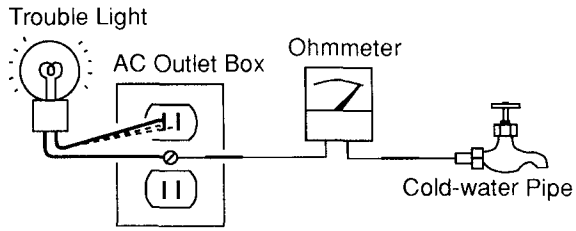

Fig B Checking for earth ground

Downloaded from www.Manualslib.com manuals search engine

SECTION 1
GENERAL

The operating instructions mentioned here are partial abstracts from the Operating Instruction Manual. The page numbers of the Operating Instruction Manual remein as in the manual.

1-1. INTRODUCTING THE SONY TRINITRON® COLOR TV

Design

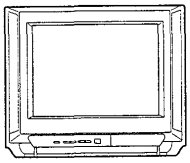

Supplied Remote Commander

RM-Y116



1-2. LOCATING THE CONTROLS

Screen Displays

For details, see the pages indicated by the numbered black circles ●.

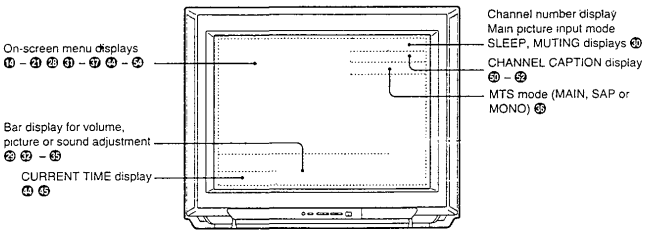

Downloaded from www.Manualslib.com manuals search engine

Front Panel

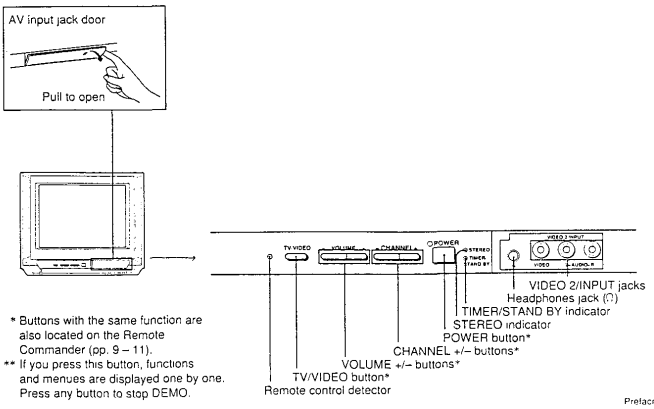

* Buttons with the same function are also located on the Remote Commander (pp. 9 – 11).
** If you press this button, functions and menues are displayed one by one. Press any button to stop DEMO.

Rear Panel

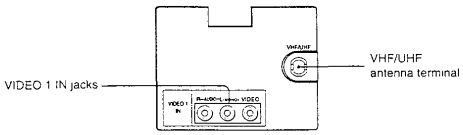

Remote Commander

For details, see the pages indicated by the numbered black circles ●.

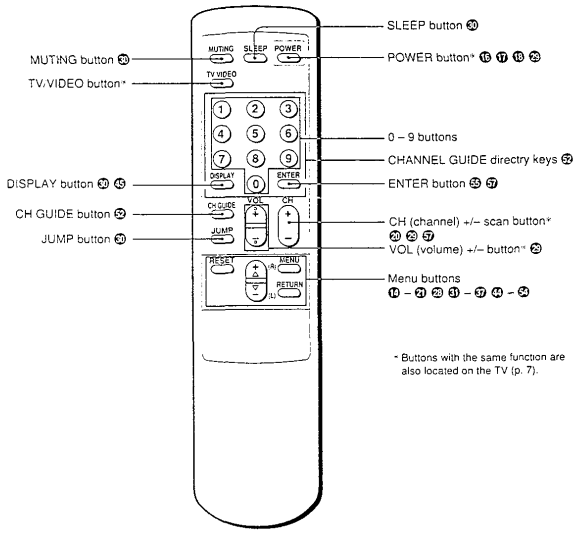

* Buttons with the same function are also located on the TV (p. 7).

Downloaded from www.Manualslib.com manuals search engine

1-3. USING THE ON-SCREEN MENUS

The following flow chart shows the different levels of on-screen menus that you can use to make various adjustments and settings. See the indicated pages for instructions on using each feature.

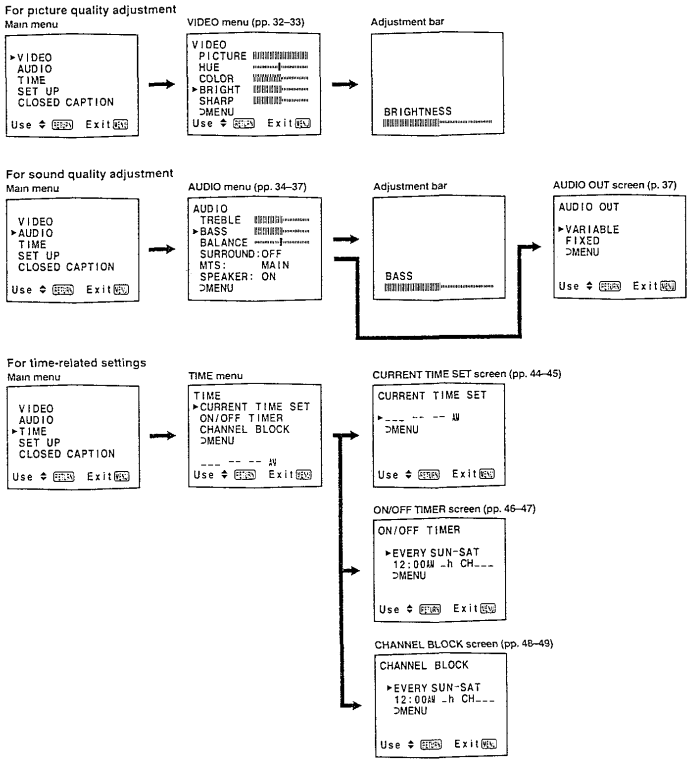

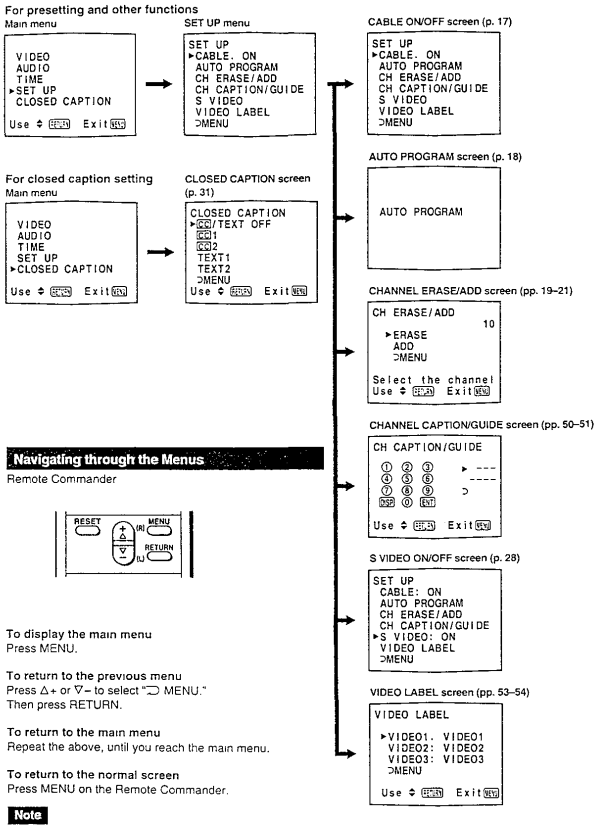

Navigating through the Menus

Remote Commander

To display the main menu
Press MENU.

To return to the previous menu
Press △+ or ▽– to select "⊃ MENU."
Then press RETURN.

To return to the main menu
Repeat the above, until you reach the main menu.

To return to the normal screen
Press MENU on the Remote Commander.

Note

The menus disappear automatically if you do not press a button within 90 seconds.
The menu you cannot select appears in black.

Downloaded from www.Manualslib.com manuals search engine

1-4. TURNING THE CABLE MODE ON OR OFF



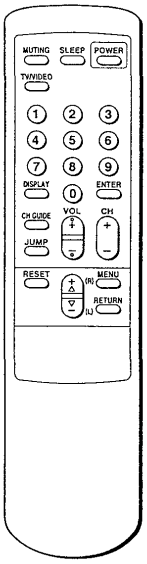

RM-Y116

To return to the normal screen
Press MENU.

If you have cable connected to your TV (pp. 12–13), follow the steps below to turn the cable connection on or off. CABLE is preset to ON when you use your TV for the first time. Then turn CABLE to OFF to preset or watch VHF or UHF channels (pp. 18-21 and 29).

1 Press POWER on the TV or the Remote Commander to turn the TV on.
The TIMER/STAND BY indicator blinks until the picture appears.



2 Press MENU.
The main menu appears.

```
▸VIDEO
 AUDIO
 TIME
 SET UP
 CLOSED CAPTION
Use ⇕ RETURN Exit MENU
```

3 Press Δ+ or ∇– to select SET UP

```
 VIDEO
 AUDIO
 TIME
▸SET UP
 CLOSED CAPTION
Use ⇕ RETURN Exit MENU
```

Press RETURN.
The SET UP menu appears, and the cursor points to "CABLE".

```
SET UP
▸CABLE: ON
 AUTO PROGRAM
 CH ERASE/ADD
 CH CAPTION/GUIDE
 S VIDEO
 VIDEO LABEL
 ⊃MENU
```

Note
If the CABLE display appears in black, the TV is in VIDEO mode and you cannot select CABLE. Press TV or TV/VIDEO to change to TV mode.

4 Press RETURN again.

```
SET UP
▸CABLE: ON
 AUTO PROGRAM
 CH ERASE/ADD
 CH CAPTION/GUIDE
 S VIDEO
 VIDEO LABEL
 ⊃MENU
```

Press Δ+ or ∇– to select ON or OFF alternately.

```
SET UP
 CABLE. ON
 AUTO PROGRAM
 CH ERASE/ADD
 CH CAPTION/GUIDE
 S VIDEO
 VIDEO LABEL
 ⊃MENU
```



```
SET UP
 CABLE: OFF
 AUTO PROGRAM
 CH ERASE/ADD
 CH CAPTION/GUIDE
 S VIDEO
 VIDEO LABEL
 ⊃MENU
```

Press RETURN.
The setting is completed.

1-5. PRESETTING TV CHANNELS



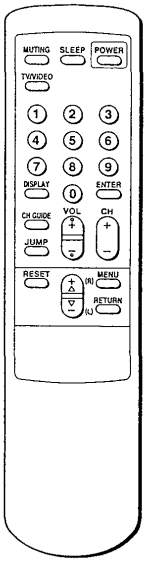

RM-Y116

Channels that can be received on this TV:

VHF	UHF	Cable
2-13	14-69	1-125

Presetting TV Channels Automatically

1 Press POWER on the TV or the Remote Commander to turn the TV on.
The TIMER/STAND BY indicator blinks until the picture appears.



2 Set the cable connection on or off, depending on if you want to preset cable or VHF/UHF channels.
(Follow the steps in "Turning the Cable Mode On or Off", p. 17)

3 Press MENU.
The main menu appears.

```
▸VIDEO
 AUDIO
 TIME
 SET UP
 CLOSED CAPTION
Use ⇕ RETURN Exit MENU
```

4 Press Δ+ or ∇– to select SET UP
Then press RETURN.
The SET UP menu appears.

```
SET UP
▸CABLE: ON
 AUTO PROGRAM
 CH ERASE/ADD
 CH CAPTION/GUIDE
 S VIDEO
 VIDEO LABEL
 ⊃MENU
```

Note
If the AUTO PROGRAM display appears in black, the TV is in video mode and you cannot select AUTO PROGRAM. Press TV or TV/VIDEO to change to TV mode.

5 Press Δ+ or ∇– to select AUTO PROGRAM.
Then press RETURN.




```
SET UP
 CABLE. ON
▸AUTO PROGRAM
 CH ERASE/ADD
 CH CAPTION/GUIDE
 S VIDEO
 VIDEO LABEL
 ⊃MENU
```

"AUTO PROGRAM" appears on the screen and receivable channels (other than the channels already preset) are preset in numerical sequence. The channels previously preset will not remain in the TV's memory.
When no more channels can be found, the programming stops and the lowest numbered channel is displayed.

To erase unnecessary channels, or to add channels that could not be preset automatically because their signal was too weak, follow the steps in "Erasing Unnecessary Channels — CHANNEL ERASE" (pp. 19–20) and "Presetting Only Desired Channels — CHANNEL ADD" (p. 21).

Downloaded from www.Manualslib.com manuals search engine



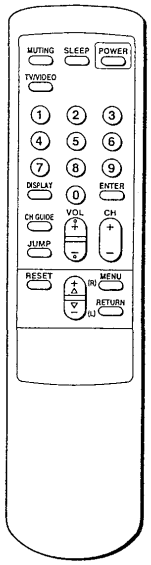

RM-Y116

Erasing Unnecessary Channels—CHANNEL ERASE

Use this feature to erase unnecessary TV channels, so that when you press CH +/–, the channel(s) are skipped.

1 Press MENU.
The main menu appears.

```
▸VIDEO
 AUDIO
 TIME
 SET UP
 CLOSED CAPTION

Use ⇕ RETURN  Exit MENU
```

2 Press △+ or ▽– to select SET UP

```
 VIDEO
 AUDIO
 TIME
▸SET UP
 CLOSED CAPTION

Use ⇕ RETURN  Exit MENU
```

Press RETURN.
The SET UP menu appears.

```
SET UP
▸CABLE: ON
 AUTO PROGRAM
 CH ERASE/ADD
 CH CAPTION/GUIDE
 S VIDEO
 VIDEO LABEL
 >MENU
```

3 Press △+ or ▽– to select CH ERASE/ADD.

```
SET UP
 CABLE: ON
 AUTO PROGRAM
▸CH ERASE/ADD
 CH CAPTION/GUIDE
 S VIDEO
 VIDEO LABEL
 >MENU
```

Press RETURN.
The CH ERASE/ADD screen appears, and the cursor points to "ERASE".

```
CH ERASE/ADD
                10
 ▸ERASE
  ADD
  >MENU

Select the channel
Use ⇕ RETURN  Exit MENU
```

Note

If CH ERASE/ADD display appears in black, the TV is in video mode and you cannot select CH ERASE/ADD.
Press TV or TV/VIDEO to change to TV mode.



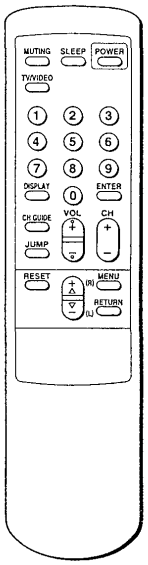

RM-Y116

To return to the normal screen
Press MENU.

Note

When you erase a VHF or UHF channel, the cable TV channel with the same number is also erased, and vice versa.

4 Press the CH +/– button to select the channel you want to erase.
For example, to erase channel 8, press CH +/– until 8 appears.

```
CH ERASE/ADD
                 8
 ▸ERASE
  ADD
  >MENU

Select the channel
Use ⇕ RETURN  Exit MENU
```

Press RETURN.
A "–" sign appears in front of the channel number display, indicating that the channel is erased from the channel scan memory.

```
CH ERASE/ADD
                - 8
 ▸ERASE
  ADD
  >MENU

Use ⇕ RETURN  Exit MENU
```

The next time you press the CH +/– buttons, channel 8 will be skipped.

To erase other channels
Repeat step 4.

Cable TV channel chart*
Cable TV systems use letters or numbers to designate channels. To tune in a channel, refer to the chart below.

Number on this TV	Corresponding cable TV channel	Number on this TV	Corresponding cable TV channel
1	A-8	33	T
5	A-7	34	U
6	A-6	35	V
14	A	36	W
15	B	37	W+1
16	C	38	W+2
17	D	39	W+3
18	E		*
19	F	93	W+57
20	G	94	W+58
21	H	95	A-5
22	I	96	A-4
23	J	97	A-3
24	K	98	A-2
25	L	99	A-1
26	M	100	W+59
27	N	101	W+60
28	O	102	W+61
29	P		
30	Q	123	W+82
31	R	124	W+83
32	S	125	W+84

* This designation of cable TV channels conforms to the EIA/NCTA recommendation. Check with your local cable TV company for more complete information on the available channels.

Downloaded from www.Manualslib.com manuals search engine



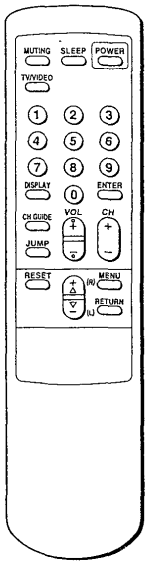

RM-Y116

To return to the normal screen
Press MENU.

Note
If you add a VHF or UHF channel, the cable TV channel with the same number is also added, and vice versa.

Presetting Only Desired Channels—CHANNEL ADD

Use this feature to add channels one by one to the channel scan memory.

1-3 (Follow steps 1–3 in "Erasing Unnecessary Channels—CHANNEL ERASE," p. 19.)

Note
If the CH ERASE/ADD display appears in black, the TV is in video mode and you cannot select CHANNEL ERASE/ADD.
Press TV or TV/VIDEO to change to TV mode.

4 Press △ + or ▽ – to select ADD.

```
CH ERASE/ADD
                10
  ERASE
 ▶ADD
  ⊃MENU

Select the channel
Use ⇕ RETURN  Exit MENU
```

5 Press 0–9 and ENTER to select the channel you want to add.
For example, to add channel 25, press 2, 5 and ENTER.



```
CH ERASE/ADD
                25
  ERASE
 ▶ADD
  ⊃MENU

Select the channel
Use ⇕ RETURN  Exit MENU
```

Press RETURN.
A "+" sign appears in front of the channel number display, indicating that the channel is added to the channel scan memory.

```
CH ERASE/ADD
                +25
  ERASE
 ▶ADD
  ⊃MENU

Use ⇕ RETURN  Exit MENU
```

To add other channels
Repeat step 5.

1-6. CONNECTING OTHER EQUIPMENT

Connecting Headphones

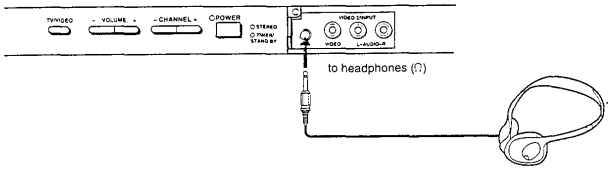

Note
To prevent hearing damage due to sudden or prolonged excessive volume, do not raise the headphones volume too high while listening.

Downloaded from www.Manualslib.com manuals search engine

1-7. WATCHING TV PROGRAMS



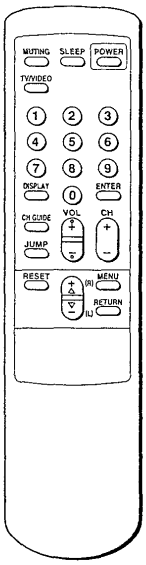

RM-Y116

1 Press POWER on the TV or the Remote Commander to turn the TV on.
The TIMER/STAND BY indicator blinks until the picture appears.



2 Turn the cable mode on or off to select the type of channel you want to watch, VHF/UHF or cable TV.
(Follow the steps in "Turning the Cable Mode On or Off," p. 17.)

If "VIDEO" is displayed on the screen, press the TV or TV/VIDEO button so that the channel number appears.

3 Select a channel in one of the following two ways:

To scan the preset channels* in numerical sequence
Press CH +/–





* For more information on presetting channels, see pp. 18–21.

To select a channel directly
Press 0 – 9 and ENTER.
For example, to select channel 14, press 1, 4 and ENTER.





4 Press VOL +/– to adjust the volume.

The display will disappear automatically after 3 seconds.

Press + to increase the volume.
Press – to decrease the volume.

To turn off the TV
Press POWER on the TV or the Remote Commander again.

1-8. USING CONVENIENT FEATURES



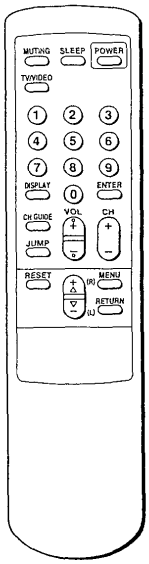

RM-Y116

Muting the Sound—MUTING

Press MUTING.
The display "MUTING" will appear on the screen.

To restore the sound
Press MUTING again, or press VOL +.

Keeping the Displays On-Screen—DISPLAY

To display the channel
Press DISPLAY.
All the existing displays appear: channel number, channel caption (if set), MTS mode ("SAP" only), window picture input mode and the current time ("AM" or "PM" disappears after about three seconds).

To cancel the display
Press DISPLAY again.
The channel display will disappear.

Using the Sleep Timer—SLEEP

The sleep timer turns off the TV automatically after the amount of time you select.

Press SLEEP
Each time you press SLEEP the time increments "30" "60" "90" and "OFF" mode appear in sequence.

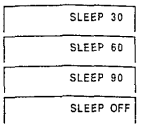

The SLEEP display appears about one minute before the TV turns off.

To cancel the setting
Press SLEEP until "OFF" mode appears.
The "SLEEP OFF" display appears for about three seconds.
OR
Turn the TV off.
The sleep timer setting is cancelled.

Switching Quickly Between Two Channels—JUMP

Press JUMP once to recall the channel you were watching previously. Press JUMP again to switch back. Use this feature to keep track of two programs alternately.

Downloaded from www.Manualslib.com manuals search engine

1-9. USING CLOSED CAPTION

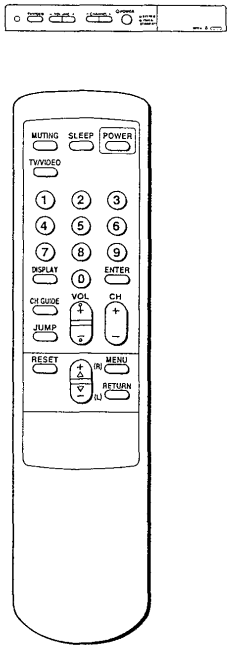

RM-Y116

Note

The closed caption system checks for errors before captions or text appear. If an error is found, the mistake does not appear, a white box appears instead. In most cases, this allows you to read the caption without difficulty. Of course, not all errors can be found, and in some cases mistakes may appear.
Poor reception of any TV station can cause poor reception of the closed caption signal causing errors or missing captions.

1 Press MENU.
The main menu appears.

```
►VIDEO
 AUDIO
 TIME
 SET UP
 CLOSED CAPTION
Use ⇕ SET UP  Exit MENU
```

2 Press Δ+ or ∇– to select CLOSED CAPTION.
Then press RETURN.
The CLOSED CAPTION screen appears.

```
CLOSED CAPTION
►CC/TEXT OFF
 CC1
 CC2
 TEXT1
 TEXT2
 ⊃MENU
Use ⇕ SET UP  Exit MENU
```

3 Press Δ+ or ∇– to select closed caption mode.

Select CC1 or CC2 to view Captions.
A Caption is a printed version of the dialogue or sound effects of a program. (The mode should be set to CC1 for most programs.)

```
CLOSED CAPTION
 CC/TEXT OFF
►CC1
 CC2
 TEXT1
 TEXT2
 ⊃MENU
Use ⇕ SET UP  Exit MENU
```

Select TEXT1 or TEXT2 to view Text.
Text is information that is presented using the half to full television screen. It is usually not related to the program.

```
CLOSED CAPTION
 CC/TEXT OFF
 CC1
 CC2
►TEXT1
 TEXT2
 ⊃MENU
Use ⇕ SET UP  Exit MENU
```

Select CC/TEXT OFF if you do not want to use the CLOSED CAPTION mode.

```
CLOSED CAPTION
►CC/TEXT OFF
 CC1
 CC2
 TEXT1
 TEXT2
 ⊃MENU
Use ⇕ SET UP  Exit MENU
```

Press RETURN.
The setting is completed.

1-10. ADJUSTING PICTURE AND SOUND QUALITY

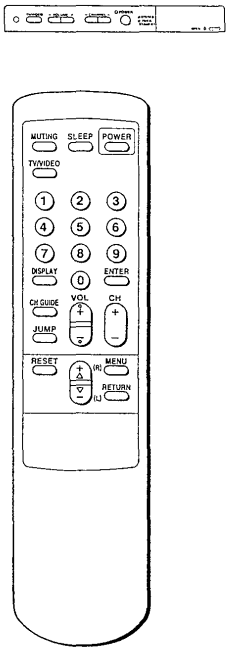

RM-Y116

Adjusting the Picture

You can adjust the picture (and sound, pp. 34–37) for each input mode (TV, VIDEO 1, VIDEO 2, VIDEO 3) by pressing TV/VIDEO on the TV or on the Remote Commander to select the input mode before making the adjustments. These adjustments are retained in memory even when you turn off the TV until you change the adjustments again.

1 Press MENU.
The main menu appears, and the cursor points to "VIDEO"

```
►VIDEO
 AUDIO
 TIME
 SET UP
 CLOSED CAPTION
Use ⇕ SET UP  Exit MENU
```

2 Press RETURN.
The VIDEO menu appears.

```
VIDEO
►PICTURE
 HUE
 COLOR
 BRIGHT
 SHARP
 ⊃MENU
Use ⇕ SET UP  Exit MENU
```

3 Press Δ+ or ∇– to select the item you want to adjust.
For example, to adjust the picture brightness, select BRIGHT.

```
VIDEO
 PICTURE
 HUE
 COLOR
►BRIGHT
 SHARP
 ⊃MENU
Use ⇕ SET UP  Exit MENU
```

Press RETURN.
The adjustment bar appears.

```
BRIGHTNESS
```


Downloaded from www.Manualslib.com manuals search engine

4 Press △+ or ▽– to make the adjustment.

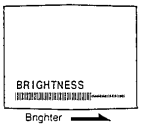

Press RETURN.
The new setting appears in the VIDEO menu.



To adjust other items
Repeat steps 3–4.

	Press ▽– to:	Press △+ to:
PICTURE	decrease picture contrast with soft color	increase picture contrast with vivid color
HUE	make skin tones become purplish	make skin tones become greenish
COLOR	decrease color intensity	increase color intensity
BRIGHTNESS	darken the picture	brighten the picture
SHARPNESS	soften the picture	sharpen the picture

The menus and adjustment bars will disappear automatically after 90 seconds if you do not press any other buttons during that time.

To return to the normal screen
Press MENU.

To restore the factory (mid-level) setting
Go to the VIDEO menu and press RESET. All the settings except for PICTURE will be restored to the mid-level setting.

1-11. USING THE TIMER-ACTIVATED FUNCTIONS



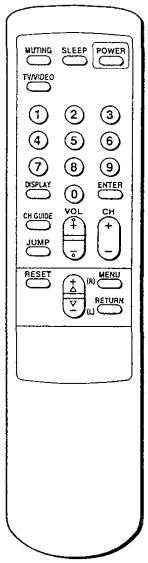

RM-Y116

Setting the Clock—CURRENT TIME SET

Follow these instructions to set the current time. The correct time must be set in order to use the timer-activated functions (ON/OFF TIMER, CHANNEL BLOCK).

EXAMPLE: Set the time to 3:15 PM, Monday.

1 Press MENU.
The main menu appears.



2 Press △+ or ▽– to select TIME.



Press RETURN.
The TIME menu appears, and the cursor points to "CURRENT TIME SET"



3 Press RETURN.
The CURRENT TIME SET screen appears.



4 Press RETURN again.
"Set the day." appears on the screen.



Downloaded from www.Manualslib.com manuals search engine

5 Press △+ or ▽– to set the day.
Each time you press △+ or ▽– the day changes consecutively.

Press RETURN.
"Set the time." appears on the screen.

```
CURRENT TIME SET
  MON 12:00 AM
  ▷MENU

Set the time.
Use ⇕ RETURN Exit MENU
```

6 Press △+ or ▽– to set the hour.
Each time you press △+ or ▽–, the hour changes starting with "12:00 AM."

Press RETURN.

```
CURRENT TIME SET
  MON  3:00 PM
  ▷MENU

Set the time.
Use ⇕ RETURN Exit MENU
```

7 Press △+ or ▽– to set the minutes.
Each time you press △+ or ▽– the minutes change in sequence.

```
CURRENT TIME SET
  MON  3:15 PM
  ▷MENU

Set the time.
Use ⇕ RETURN Exit MENU
```

Press RETURN.
The setting is completed, and the clock starts.

```
CURRENT TIME SET
▶ MON  3:15 PM
  ▷MENU

Use ⇕ RETURN Exit MENU
```

To reset the time
Press RESET while in the CURRENT TIME screen, and repeat steps 4–7.

To display the time
Press DISPLAY.

To return to the normal screen
Press MENU.

Notes

- The internal clock of this TV operates on a 12-hour cycle. If a 24-hour cycle number (for instance, 13:00) is entered, it will be cleared when you press RETURN.

12:00 AM stands for midnight. 12:00 PM stands for noon.

- All the settings including CURRENT TIME SET will be erased if you unplug the TV or a power failure occurs. Reset the current time by following steps 1–7.



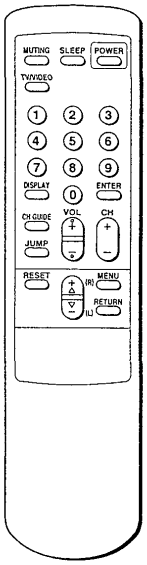

RM-Y116

Setting the ON/OFF TIMER

With this function you can set your favorite program to appear on the screen at the time that you set.

EXAMPLE: Set the timer to turn on the TV every Monday through Friday at 3:15 PM for 2 hours, on channel 21.

1 Press MENU.
The main menu appears.

```
▶VIDEO
 AUDIO
 TIME
 SET UP
 CLOSED CAPTION

Use ⇕ RETURN Exit MENU
```

2 Press △+ or ▽– to select TIME.
Then press RETURN.
The TIME menu appears.

```
TIME
▶CURRENT TIME SET
 ON/OFF TIMER
 CHANNEL BLOCK
 ▷MENU

 MON  3:15 PM
Use ⇕ RETURN Exit MENU
```

3 Press △+ or ▽– to select ON/OFF TIMER.
Then press RETURN.
The ON/OFF TIMER screen appears.

```
ON/OFF TIMER

▶EVERY SUN-SAT
 12:00AM -h CH---
 ▷MENU

Use ⇕ RETURN Exit MENU
```

Note

If the ON/OFF TIMER display appears in black, the current time has not been set and you cannot select ON/OFF TIMER. To set the clock, see "Setting the Clock—CURRENT TIME SET", pp. 44–45.

4 Press RETURN again.
"Set the day." appears on the screen.

```
ON/OFF TIMER

 EVERY SUN-SAT
 12:00AM-_h CH---
 ▷MENU

Set the day.
Use ⇕ RETURN Exit MENU
```


Downloaded from www.Manualslib.com manuals search engine

5 Press △+ or ▽– to set the day.
Each time you press △+ or ▽– the days of the week change as shown in Fig. 1.
Then press RETURN.
"Set the time." appears on the screen.

```
ON/OFF TIMER

  EVERY MON-FRI
  12:00AM _h CH___
  >MENU

Set the time.
Use ⇕ ENTER  Exit MENU
```

6 Press △+ or ▽– to set the hour that you want the TIMER to start.
Each time you press △+ or ▽–, the hour changes in sequence.
Then press RETURN.

```
ON/OFF TIMER

  EVERY MON-FRI
   3:00PM _h CH___
  >MENU

Set the time.
Use ⇕ ENTER  Exit MENU
```

7 Press △+ or ▽– to set the minutes.
Each time you press △+ or ▽– the minutes change in sequence.
Then press RETURN.
"Set the duration." appears on the screen.

```
ON/OFF TIMER

  EVERY MON-FRI
   3:15PM _h CH___
  >MENU

Set the duration.
Use ⇕ ENTER  Exit MENU
```

8 Press △+ or ▽– to set the duration of time.
Each time you press △+ or ▽–, the duration changes from "1" to "6" in sequence.
Then press RETURN.
"Select the channel" appears on the screen.

```
ON/OFF TIMER

  EVERY MON-FRI
   3:15PM 2h CH___
  >MENU

Select the channel
Use ⇕ ENTER  Exit MENU
```

9 Press △+ or ▽– to set the channel that you want the TV to tune in.
Each time you press △+ or ▽–, the channel number changes from 1 to 125 in sequence.

```
ON/OFF TIMER

  EVERY MON-FRI
   3:15PM 2h CH 21
  >MENU

Select the channel
Use ⇕ ENTER  Exit MENU
```

Press RETURN.
The setting is completed, and the TIMER indicator on the front of the TV lights up.

```
ON/OFF TIMER

 ►EVERY MON-FRI
   3:15PM 2h CH 21
  >MENU

Use ⇕ ENTER  Exit MENU
```

To clear the ON/OFF TIMER setting
Press RESET while in the ON/OFF TIMER screen.

To return to the normal screen
Press MENU.

Notes

- While the TIMER is set, the TIMER indicator on the TV is on.
- One minute before the timer goes off, the "TV will turn off" display will appear on the screen.
- All the settings including ON/OFF TIMER will be erased if you unplug the TV or a power failure occurs. Reset the ON/OFF TIMER by following steps 1-9.
- If you have not set the clock correctly, the ON/OFF TIMER will not operate at the proper time. To set the clock, see "Setting the Clock–CURRENT TIME SET", pp. 44–45.

Fig. 1
Selecting the day(s) of the week
When you press △+, the days of the week appear in the following order.

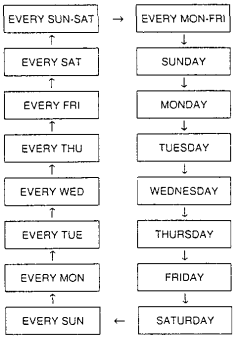

(▽–: reverse order)



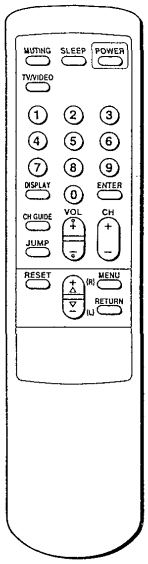

RM-Y116

Setting CHANNEL BLOCK

Use this function to block a channel from appearing on the screen during the time you specify. You can use this function to prevent children from watching undesirable programs.

EXAMPLE: Set CHANNEL BLOCK every Sunday at 8:45 PM for one hour, on channel 38.

1 Press MENU.
The main menu appears.

```
►VIDEO
 AUDIO
 TIME
 SET UP
 CLOSED CAPTION

Use ⇕ ENTER  Exit MENU
```

2 Press △+ or ▽– to select TIME.
Then press RETURN.
The TIME menu appears.

```
TIME
►CURRENT TIME SET
 ON/OFF TIMER
 CHANNEL BLOCK
 >MENU

 MON  3:15 PM
Use ⇕ ENTER  Exit MENU
```

3 Press △+ or ▽– to select CHANNEL BLOCK.
Then press RETURN.
The CHANNEL BLOCK screen appears.

```
CHANNEL BLOCK

 ►EVERY SUN-SAT
  12:00AM _h CH___
  >MENU

Use ⇕ ENTER  Exit MENU
```

Note

If the CHANNEL BLOCK display appears in black, the current time has not been set and you cannot select CHANNEL BLOCK. To set the clock, see "Setting the Clock—CURRENT TIME SET", pp. 44–45.

4 Press RETURN again.
"Set the day." appears on the screen.

```
CHANNEL BLOCK

  EVERY SUN-SAT
  12:00AM _h CH___
  >MENU

Set the day.
Use ⇕ ENTER  Exit MENU
```


Downloaded from www.Manualslib.com manuals search engine

5 Press Δ+ or ∇– to set the day.
Each time you press Δ+ or ∇–, the days of the week change as shown in Fig. 1.(See p. 47.)
Then press RETURN.
"Set the time." appears on the screen.

```
CHANNEL BLOCK

  SUNDAY
  12:00AM -h CH---
  >MENU

Set the time.
Use ⇕ RETURN  Exit MENU
```

6 Press Δ+ or ∇– to set the hour.
Each time you press Δ+ or ∇–, the hour changes in sequence.
Then press RETURN.

```
CHANNEL BLOCK

  SUNDAY
  8:00PM -h CH---
  >MENU

Set the time.
Use ⇕ RETURN  Exit MENU
```

7 Press Δ+ or ∇– to set the minutes.
Each time you press Δ+ or ∇–, the minutes change in sequence.
Then press RETURN.
"Set the duration." appears on the screen.

```
CHANNEL BLOCK

  SUNDAY
  8:45PM -h CH---
  >MENU

Set the duration.
Use ⇕ RETURN  Exit MENU
```

8 Press Δ+ or ∇– to set the duration of time that you want the TV remain blocked.
Each time you press Δ+ or ∇–, the duration changes from 1 to 6 in sequence.
Then press RETURN.
"Select the channel" appears on the screen.

```
CHANNEL BLOCK

  SUNDAY
  8:45PM 1h CH---
  >MENU

Select the channel
Use ⇕ RETURN  Exit MENU
```

9 Press Δ+ or ∇– to set the channel that you want to block.
Each time you press Δ+ or ∇– the channel number changes from 1 to 125 in sequence.

```
CHANNEL BLOCK

  SUNDAY
  8:45PM 1h CH 38
  >MENU

Select the channel
Use ⇕ RETURN  Exit MENU
```

Press RETURN.
The setting is completed.

```
CHANNEL BLOCK

 ►SUNDAY
  8:45PM 1h CH 38
  >MENU

Use ⇕ RETURN  Exit MENU
```

If you select a channel which has been blocked, the message of "BLOCKED" appears.

```
                38

        BLOCKED
```

To clear the BLOCK setting
Press RESET while in the CHANNEL BLOCK screen.

To return to the normal screen
Press MENU.

Notes

- If you set a new CHANNEL BLOCK by following steps 1-9, the original setting will be erased.
- If you have not set the clock correctly, CHANNEL BLOCK will not operate at the proper time. To set the clock, see "Setting the Clock—CURRENT TIME SET", pp. 44–45.

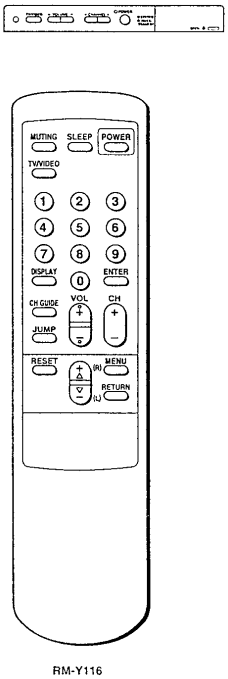

RM-Y116

Setting Channel Captions—CH CAPTION

Use this feature to caption up to 12 channel number displays with the matching channel call letters.

EXAMPLE: Caption channel 20 with ESPN at the caption position number 4.

1 Press MENU.
The main menu appears.

```
►VIDEO
 AUDIO
 TIME
 SET UP
 CLOSED CAPTION

Use ⇕ RETURN  Exit MENU
```

2 Press Δ+ or ∇– to select SET UP
Then press RETURN.
The SET UP menu appears.

```
SET UP
►CABLE: ON
 AUTO PROGRAM
 CH ERASE/ADD
 CH CAPTION/GUIDE
 S VIDEO
 VIDEO LABEL
 >MENU
```

3 Press Δ+ or ∇– to select CH CAPTION/GUIDE.
Then press RETURN.
The CH CAPTION/GUIDE screen appears.

```
CH CAPTION/GUIDE
 ① ② ③      ► ---
 ④ ⑤ ⑥        ----
 ⑦ ⑧ ⑨      >
 DISP ⓪ ENT
Use ⇕ RETURN  Exit MENU
```

Note

If the CH CAPTION display appears in black, the TV is in video mode and you cannot select CH CAPTION/GUIDE. Press TV or TV/VIDEO to change to TV mode.

4 Press RETURN again.
"Select a position." appears on the screen.

```
CH CAPTION/GUIDE
 ① ② ③       ---
 ④ ⑤ ⑥-      ----
 ⑦ ⑧ ⑨      >
 DISP ⓪ ENT
Select a position.
Use ⇕ RETURN  Exit MENU
```


Downloaded from www.Manualslib.com manuals search engine

5 Press Δ+ or ∇– to select a caption position number.
Each time you press Δ+ or ∇– the caption position number is marked in sequence.
Then press RETURN.
"Select the channel" appears on the screen.



6 Press Δ+ or ∇– to select the channel you want to caption.
Each time you press Δ+ or ∇–, the channel number changes from 1 to 125.
Then press RETURN.
"Select the letter." appears on the screen.



7 Press Δ+ or ∇– to select the first letter.
Each time you press Δ+ or ∇–, "0-9" "A-Z", "&", "]" "–" and "_(blank space)" appear in sequence.
Then press RETURN.



8 Repeat step 7 to select each remaining letter.
(For a 3-letter caption, leave a space by pressing RETURN only.)



9 Press RETURN.
The setting is completed.



To caption other channels
Repeat steps 4-9.

To erase unneeded captions
Call the caption setting screen by following steps 1–5, and press RESET.

To return to the normal screen
Press MENU.



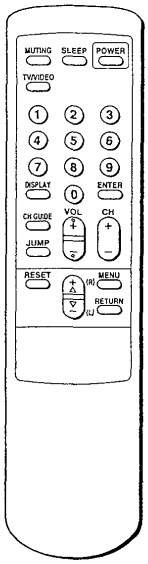

RM-Y116

Viewing the Captioned Channels—CH GUIDE

Use this feature to display the captions you set, and to select a channel directory for viewing.

1 Press CH GUIDE.
A directory appears, corresponding to the directory keys on the Remote Commander.



To cancel the CHANNEL GUIDE screen
Press CH GUIDE again.

2 *Press the directory key of the channel you want to watch.*



Downloaded from www.Manualslib.com manuals search engine

1-13. TROUBLESHOOTING

Symptom	Possible causes and remedies
Poor or no picture (screen not lit), good sound	• Adjust PICTURE. • Adjust BRIGHTNESS. • Check antenna/cable connections.
Good picture, no sound	• Press VOLUME + on the TV or VOL + on the Remote Commander. • Press MUTING on the Remote Commander. • Check that the MTS setting is set correctly. • Check that the TV/VIDEO button is set correctly. • Check that SPEAKER is set to ON.
No picture (screen not lit), no sound	• Is POWER switched on ? • Check the power cord connection. • Check that the TV/VIDEO button is set correctly.
No color	• Is it a color program ? • Adjust COLOR.
Snow and noise only	• Is it an active or the correct channel ? • Check the CABLE setting. • Check antenna/cable connections.
Dotted lines or stripes	This is often caused by local interference. (e.g. cars, neon signs, hairdryers etc.) Adjust the antenna for minimum interference.
Double images or ghosts	Reflections from nearby mountains or buildings often cause this problem. A highly directional outdoor antenna or a CATV cable may improve the picture.
Try another channel. It could be station trouble.	

If the problem persists, contact your nearest service facility.

Downloaded from www.Manualslib.com manuals search engine

SECTION 2
DISASSEMBLY

2-1. REAR COVER REMOVAL

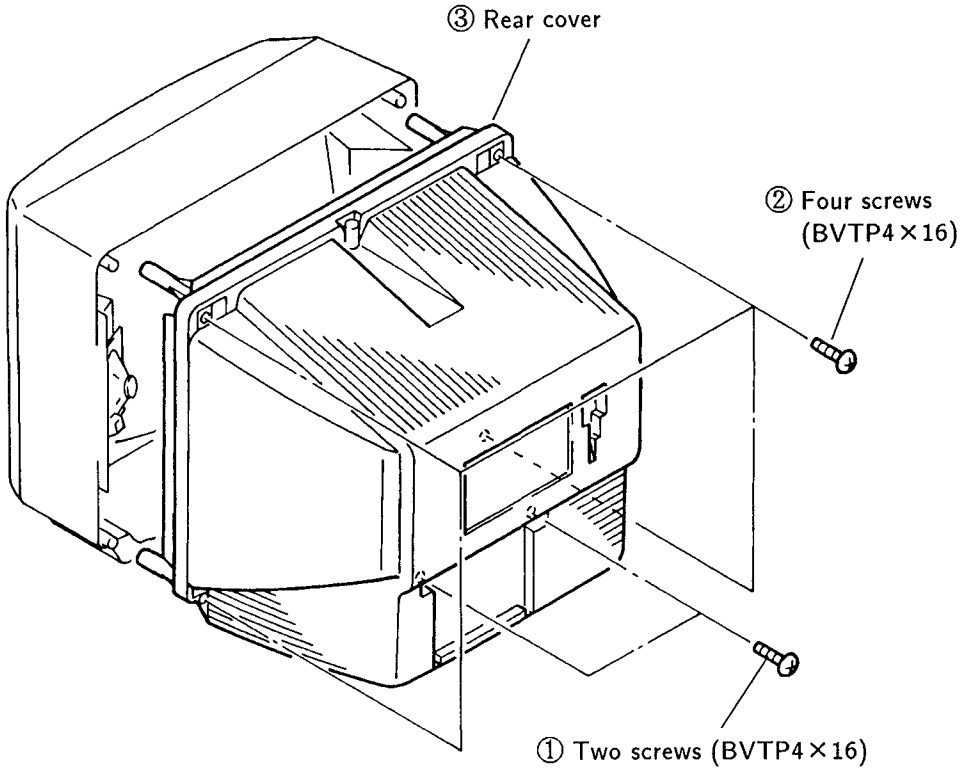

2-2. SERVICE POSITION

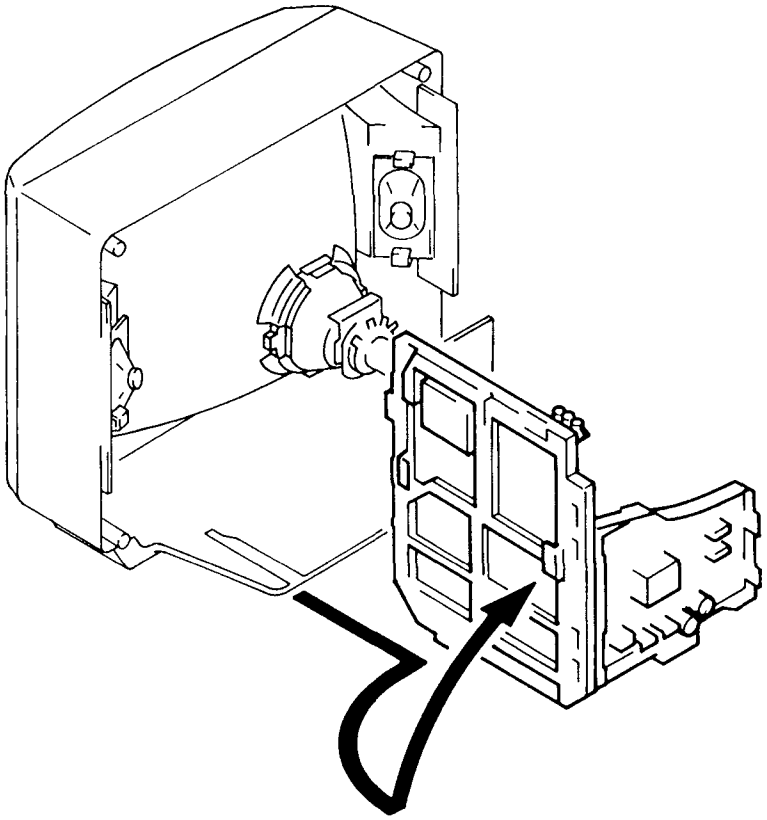

Downloaded from www.Manualslib.com manuals search engine

2-3. PICTURE TUBE REMOVAL

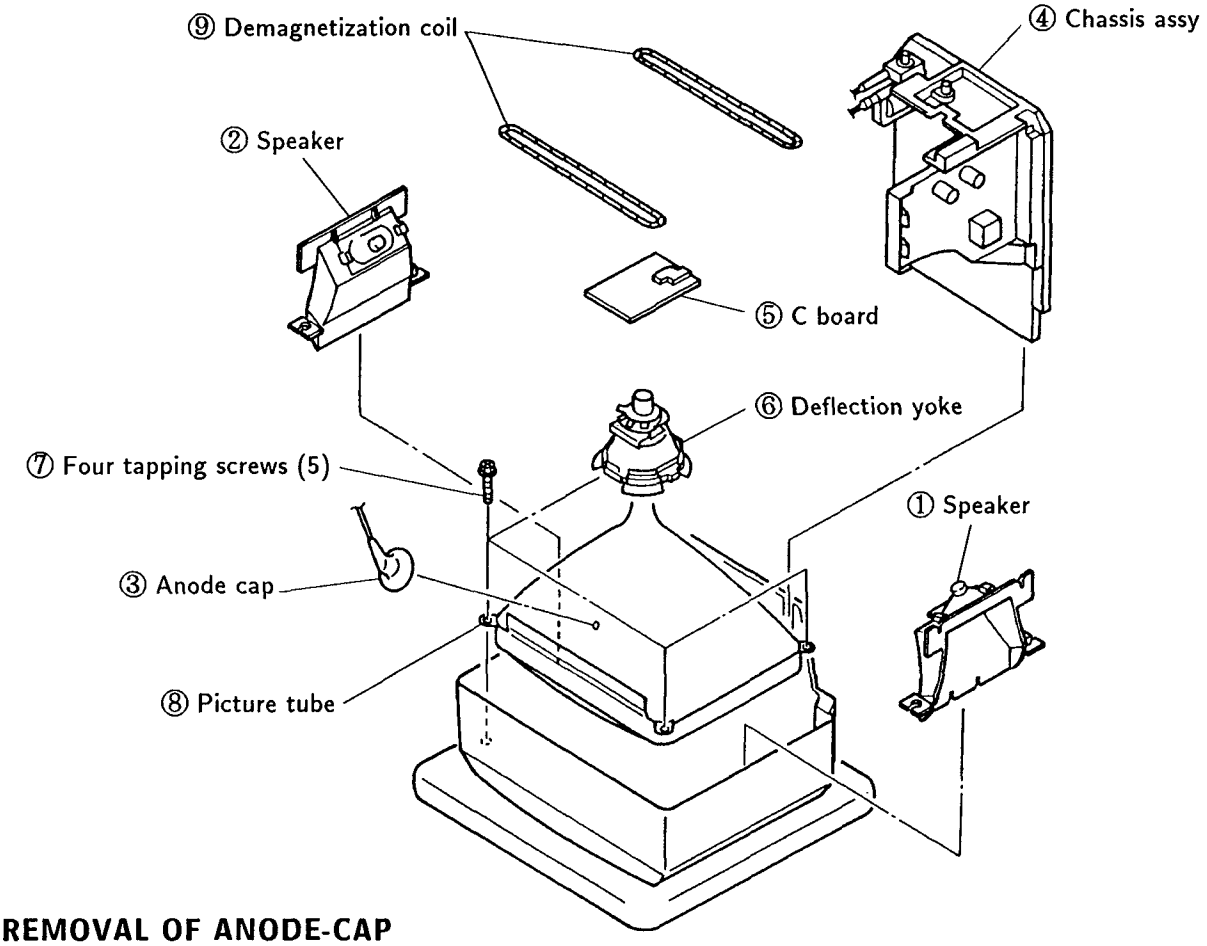

• REMOVAL OF ANODE-CAP

NOTE : Short circuit the anode of the picture tube and the anode cap to the metal chassis, CRT chield or carbon painted on the CRT, after removing the anode.

• REMOVING PROCEDURES

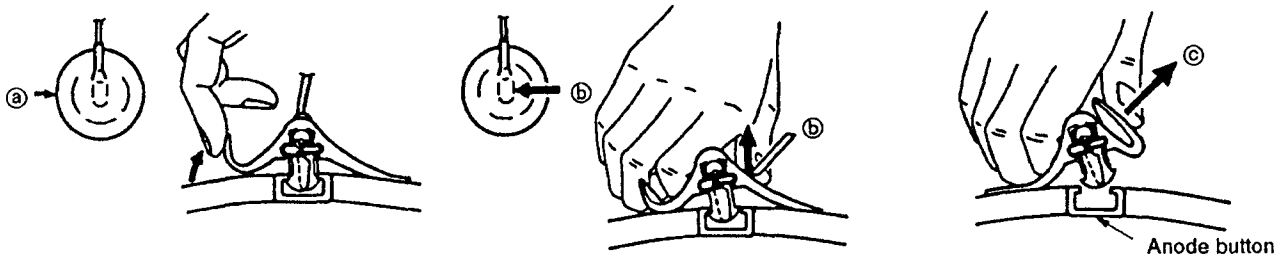

① Turn up one side of the rubber cap in the direction indicated by the arrow ⓐ.

② Using a thumb pull up the rubber cap firmly in the direction indicated by the arrow ⓑ.

③ When one side of the rubber cap is separated from the anode button, the anode-cap can be removed by turning up the rubber cap and pulling up it in the direction of the arrow ⓒ.

• HOW TO HANDLE AN ANODE-CAP

① Don't hurt the surface of anode-caps with sharp shaped material!

② Don't press the rubber hardly not to hurt inside of anode-caps!
A material fitting called as shatter-hook terminal is built in the rubber.

③ Don't turn the foot of rubber over hardly!
The shatter-hook terminal will stick out or hurt the rubber.

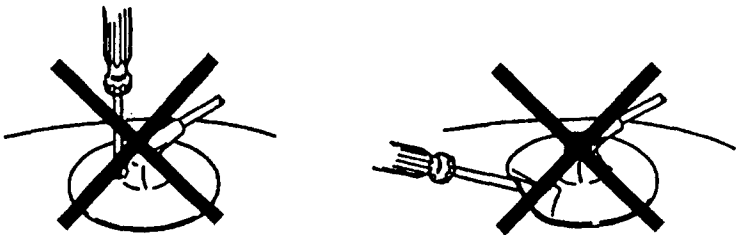

Downloaded from www.Manualslib.com manuals search engine

SECTION 3
SET-UP ADJUSTMENTS

- The following adjustments should be made when a complete realignment is required or a new picture tube is installed.
- These adjustments should be performed with rated power supply voltage unless otherwise noted.

The controls and switch should be set as follows unless otherwise noted :

PICTURE control	normal
BRIGHTNESS control	normal

Perform the adjustments in order as follows:

1. Beam Landing
2. Convergence
3. Focus
4. Screen (G 2) and White Balance

Note: Test Equipment Required.

1. Color bar Pattern Generator
2. Degausser
3. DC Power Supply
4. Digital multimeter

Preparation:

- Feed in the white pattern signal.
- Before starting, degauss the entire screen.

3-1. BEAM LANDING

1. Input a raster signal with the pattern generator.
2. Loosen the deflection yoke mounting screw, and set the purity control to the center as shown in Fig.2
3. Turn the raster signal of the pattern generator to green.
4. Move the deflection yoke backward, and adjust with the purity control so that green is in the center and red and blue are at the sides evenly. (Fig.3)
5. Move the deflection yoke forward, and adjust so that the entire screen becomes green. (Fig.1)
6. Switch over the raster signal to red and blue and confirm the condition.
7. When the position of the deflection yoke is determined, tighten it with the deflection yoke mounting screw.
8. When landing at the corner is not right, adjust by using the disk magnets. (Fig.4)

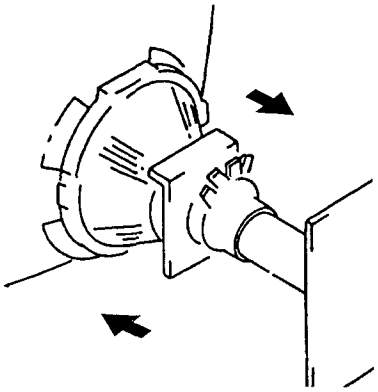

Fig.1

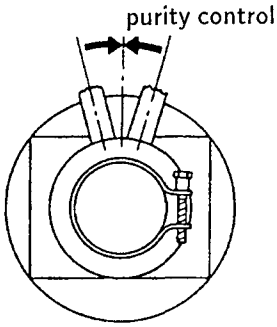

Fig.2

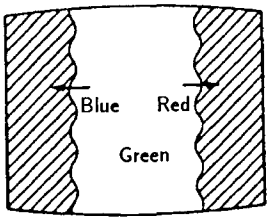

Fig.3

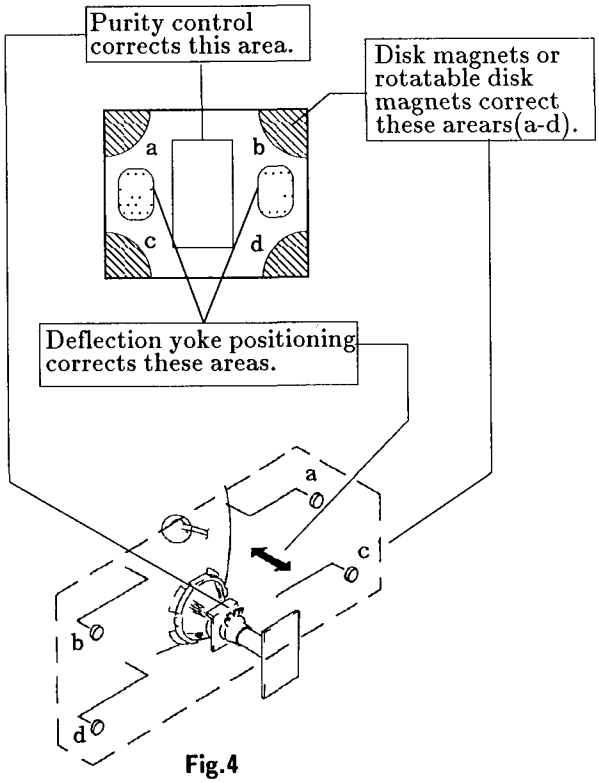

Fig.4

Downloaded from www.Manualslib.com manuals search engine

3-2. CONVERGENCE

Preparation:

- Before starting, perform FOCUS, H.SIZE, V.LIN and V.SIZE adjustments.
- Set BRIGHTNESS control to minimum.
- Feed in dot pattern.

(1) Horizontal and Vertical Static Convergence

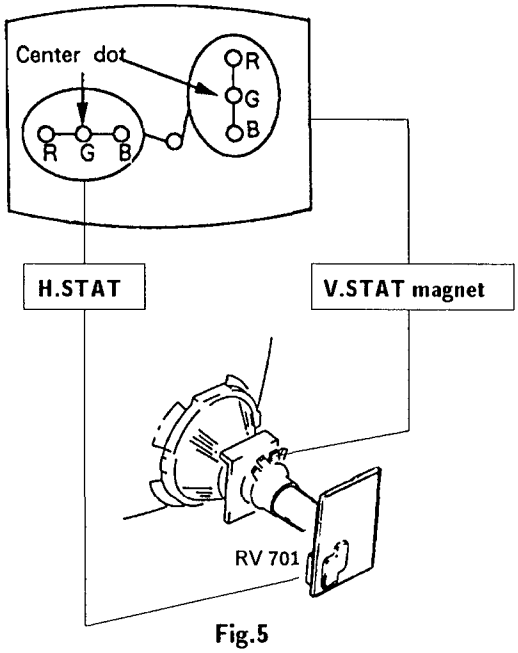

Fig.5

1. Adjust H.STAT VR to converge red, green and blue dots the in center of the screen.(Horizontal movement)
2. Adjust V. STAT magnet to converge red, green and blue dots in the center of the screen. (Vertical movement)
3. If the red, green and blue dots do not converge on the center of screen with H.STAT VR, perform horizontal convergence adjustment using H.STAT VR and V.STAT magnet as shown below. (In this case, H.STAT VR and V.STAT magnet effect each other.)

- Tilt the V.STAT magnet and adjust static convergence to open or close the V.STAT magnet.

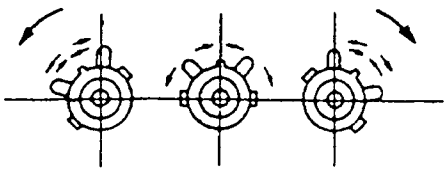

4.When the V.STAT magnet is moved in the direction of arrow ⓐ and ⓑ, red, green and blue dots move as shown below.

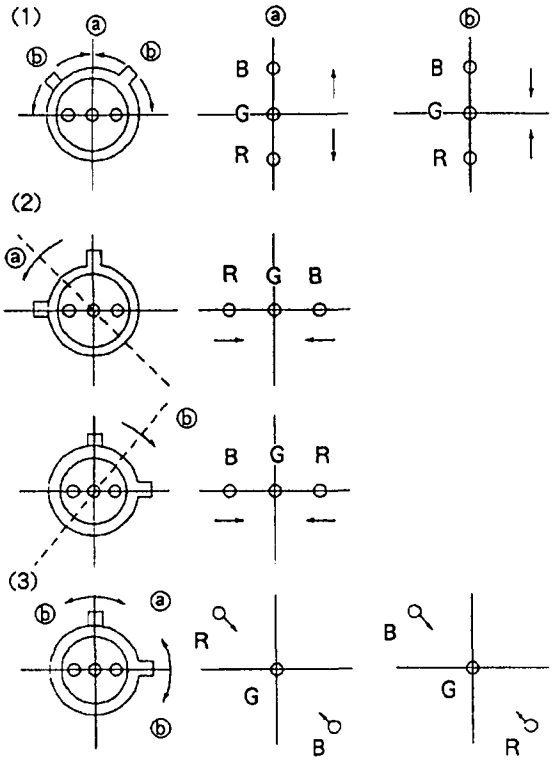

If the blue dot does not converge with red and green dots, perform following steps.

Move BMC magnet (a) to correct insufficient H.static convergence.

Rotate BMC magnet (b) to correct insufficient V.static convergence.

In either case, repeat Beam Landing Adjustment.

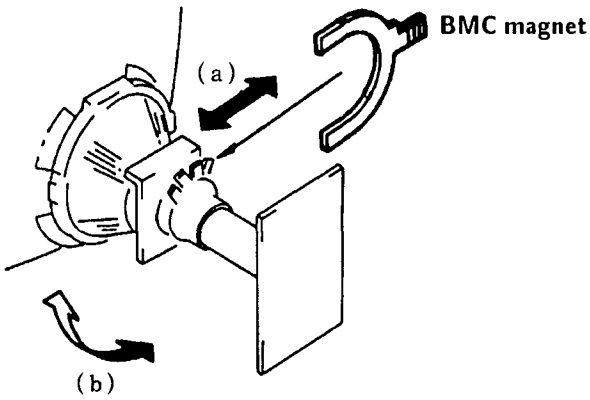

Fig.6

Downloaded from www.Manualslib.com manuals search engine

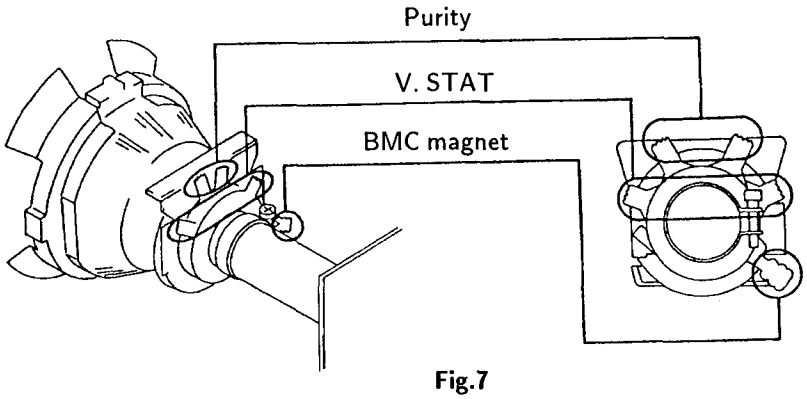

Fig.7

(3) Screen-corner Convergence

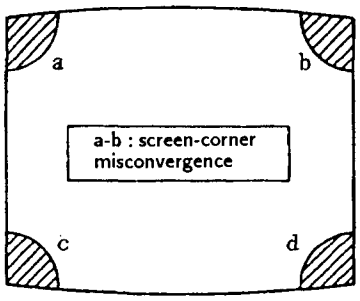

Fig.9

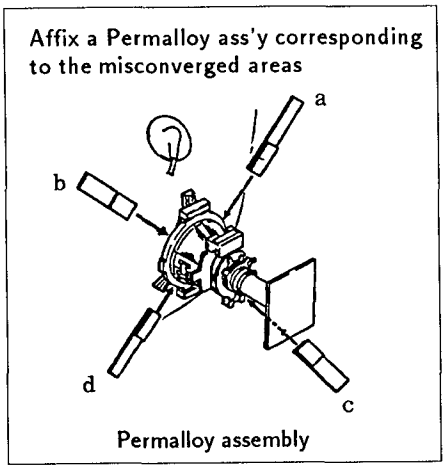

(2)Dynamic Convergence Adjustment

Preparation:

- Before starting perform Horizontal and Vertical static convergence Adjustment.

1. Slightly loosen deflection yoke screw.
2. Remove deflection yoke spacers.
3. Move the deflection yoke for best convergence as shown below.
4. Tighten the deflection yoke screw.
5. Install the deflection yoke spacers.

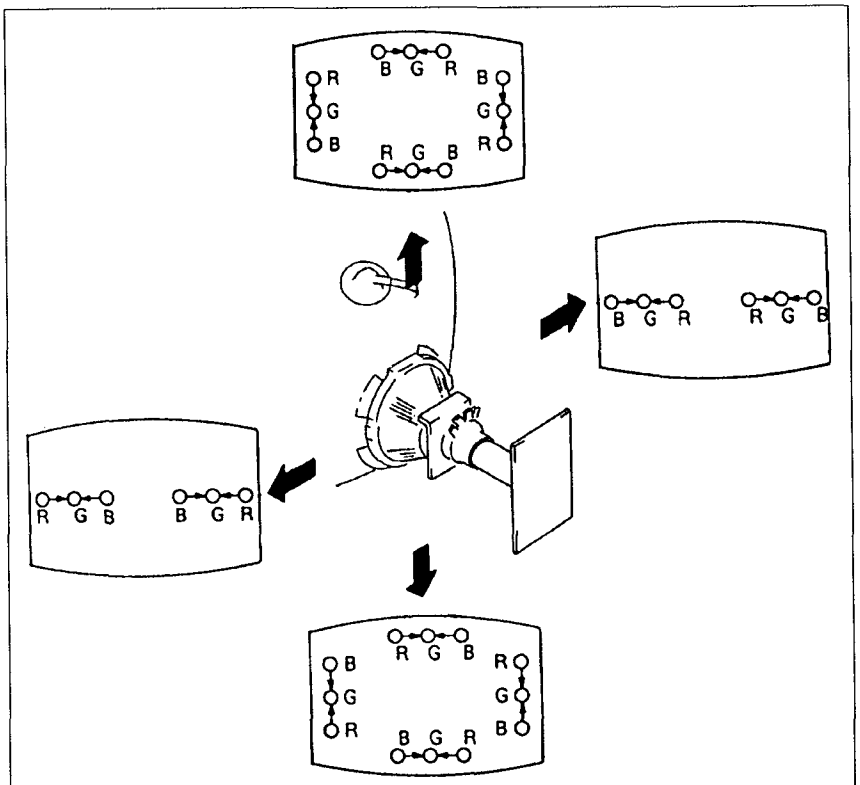

Fig.8

Downloaded from www.Manualslib.com manuals search engine

3-3. FOCUS

Adjust FOCUS (RV 703) control for best picture.

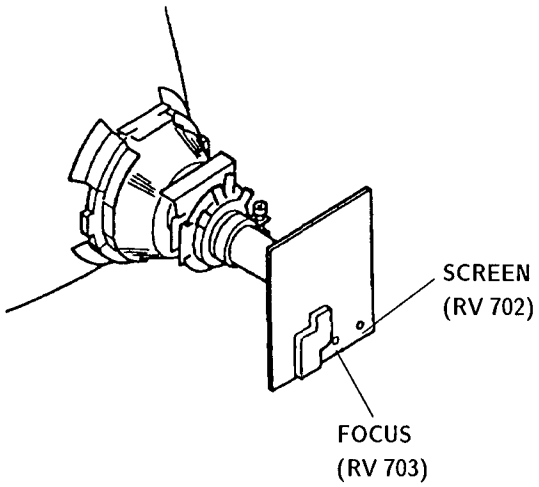

Fig.10

3-4. SCREEN(G 2)

1. Input a dots pattarn.
2. Set the PICTURE and BRIGHT controls at minimum and COLOR control at normal.
3. Adjust BKG VRs so that voltages on the red, green and blue cathodes are 160 V dc with an oscilloscope as shown in Fig.11.
4. Observe the screen and adjust SCREEN (G 2 RV 702) to obtain the faintly visible background of dot signal.

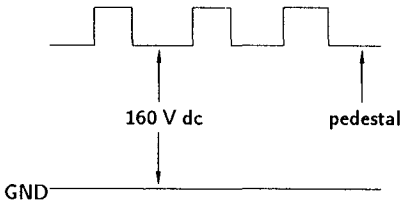

Fig.11

3-5. METHOD OF SETTING THE SERVICE ADJUSTMENT MODE

SERVICE MODE PROCEDURE

1. Standby mode.(Power off)
2. DISPLAY → 5 → VOL (+) → POWER on the Remote Commander. (Press each button within a second.)

SERVICE ADJUSTMENT MODE IN

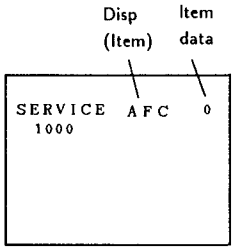

3. The CRT displays the item Being adjusted.
4. Press 1 or 4 on the Remote Commander to select the item.
5. Press 3 or 6 on the Remote Commander to change the data.
6. Press MUTING then ENTER to write into memory.

SERVICE ADJUSTMENT MODE MEMORY

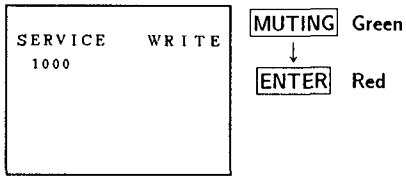

7. Turn set off and on to exit.

3-6. WHITE BALANCE ADJUSTMENTS

1. Input an entire white signal.
2. Set to service adjustment mode.
3. Set the PICTURE and BRIGHT to minimum.
4. Adjust with SBRT if necessary.
5. Select G CUT and B CUT with 1 and 4.
6. Adjust with 3 and 6 for the best white balance.
7. Set the PICTURE and BRIGHT to maximum.
8. Select GAMP and BAMP with 1 and 4.
9. Adjust with 3 and 6 for the best white balance.
10. Write into the memory by pressing MUTING then ENTER.

Downloaded from www.Manualslib.com manuals search engine

SECTION 4
SAFETY RELATED ADJUSTMENTS

A BOARD

⧓ R537 CONFIRMATION METHOD (HV HOLD-DOWN CONFIRMATION) AND READJUSTMENTS

The following adjustments should always be performed when replacing the following components (marked with ◪ on the schematic diagram).
IC602, D511, C523, C524, R534, R535, R537, R549, R637, PM501, T504, DY

①

1. Preparation before confirmation
   1) Turn the POWER switch ON, and receive entirely white signal and set the PICTURE and BRIGHT controls to maximum.
   2) Confirm that the voltage of the check terminal of TP85 is more than 90VDC when the set is operating normaly with 120.0±2.0VAC supply.

2. Hold-down operation confirmation (HV)
   1) Connect the currentmeter between the 7th pin of FBT (T504)and the land of it with connect polarity.
   2) Receive White Signal and adjust the ABL current to follows with the PICTURE and the BRIGHT controls.
      1050 ± 100μA
   3) Connect the Digital Voltmeter to pin8 of PM501 then read the voltage as A.
   4) Connect the Digital Voltmeter and DC power Supply via 1SS 119 to TP-85.
   5) Increase the DC power voltage gradually until the Picture just blanks out.
   6) Read the digital volymeter indication.
   7) Turn DC power Source off immediatery.
      STANDARD
      Less or equal to A + 6.0 VDC
   8) Receive Dot Signal and adjust the ABL current to follows, with the PIX and the BRT controls.
      50 +100/-50 μA
   9) Repeat steps from (3) to (7).
      STANDARD
      Less or equal to A + 6.0 VDC

3. Hold-down readjustment
   When step 2 is not satisfied, readjustment should be performed by altering the resistance value of R537 (a component marked with ⧓).

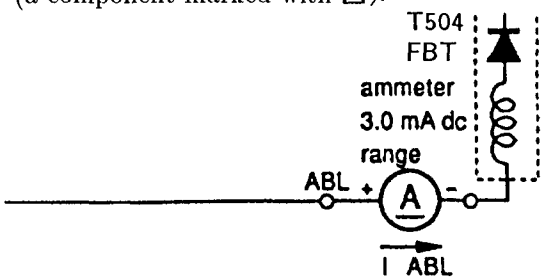

A BOARD

⧓ R511 CONFIRMATION METHOD (B+ HOLD-DOWN CONFIRMATION) AND READJUSTMENTS

The following adjustments should always be performed when replacing the following components (marked with ◪ on the schematic diagram).
IC602, C524, R511, R534, R549, R637, PM501

②

1. Hold-Down Operation Voltage (B+)
   1) Connect the currentmeter between the 7th pin of FBT (T504)and the land of it with connect polarity.
   2) Receive White Signal and adjust the ABL current to follows with the PICTURE and the BRIGHT controls.
      1050 ± 100μA
   3) Connect the Digital Voltmeter and DC power Supply via 1SS 119 to pin8 of PM501.
   4) Increase the DC power voltage gradually until the Picture just blanks out.
   5) Read the digital voltmeter indication.
   6) Turn DC power Source off immediatery.
      STANDARD
      Less or equal to 132.5 VDC
   7) Receive Dot Signal and adjust the ABL current to follows, with the PICTURE and the BRIGHT controls.
      50 +100/-50 μA
   8) Repeat steps from (4) to (6).
      STANDARD
      Less or equal to 134.5 VDC

2. Hold-down readjustment
   When step 2 is not satisfied, readjustment should be performed by altering the resistance value of R511 (a component marked with ⧓).

G BOARD

B+ VOLTAGE CONFIRMATION

The following adjustments should always be performed when replacing IC602 or R637.

1) Supply 130±$^{2}_{0}$V AC to with variable autotransformer.
2) Input an entirely monoscope signal.
3) Set the PICTURE control and the BRIGHT controls in to initial reset.
4) Confirm the voltage of A BOARD ① pin CN651 connecter is less than 116.5V DC.
5) If step 4) is not satisfied, replace IC602 and R637 repeat above steps.

Downloaded from www.Manualslib.com manuals search engine

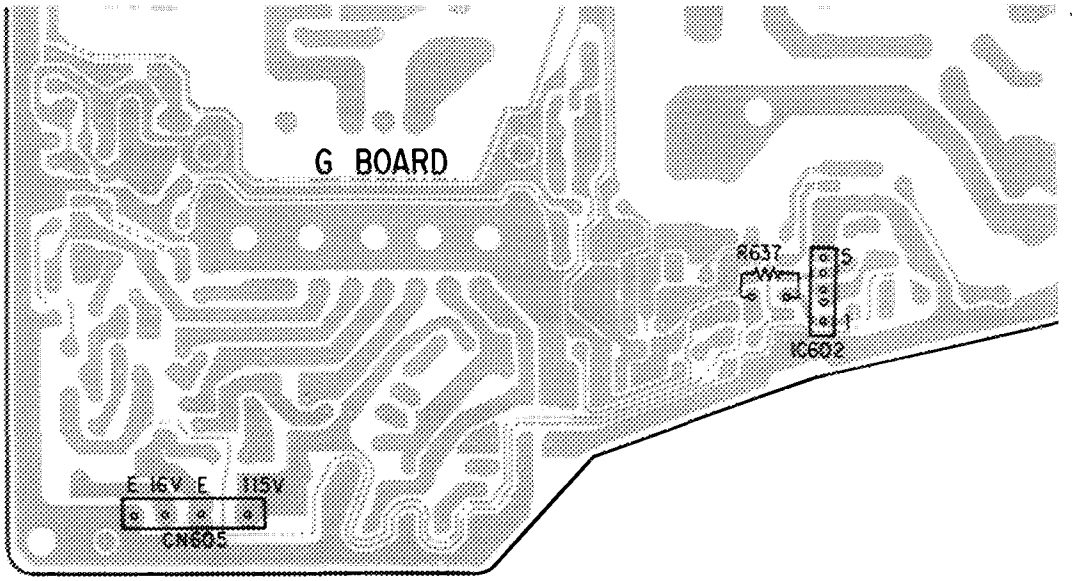

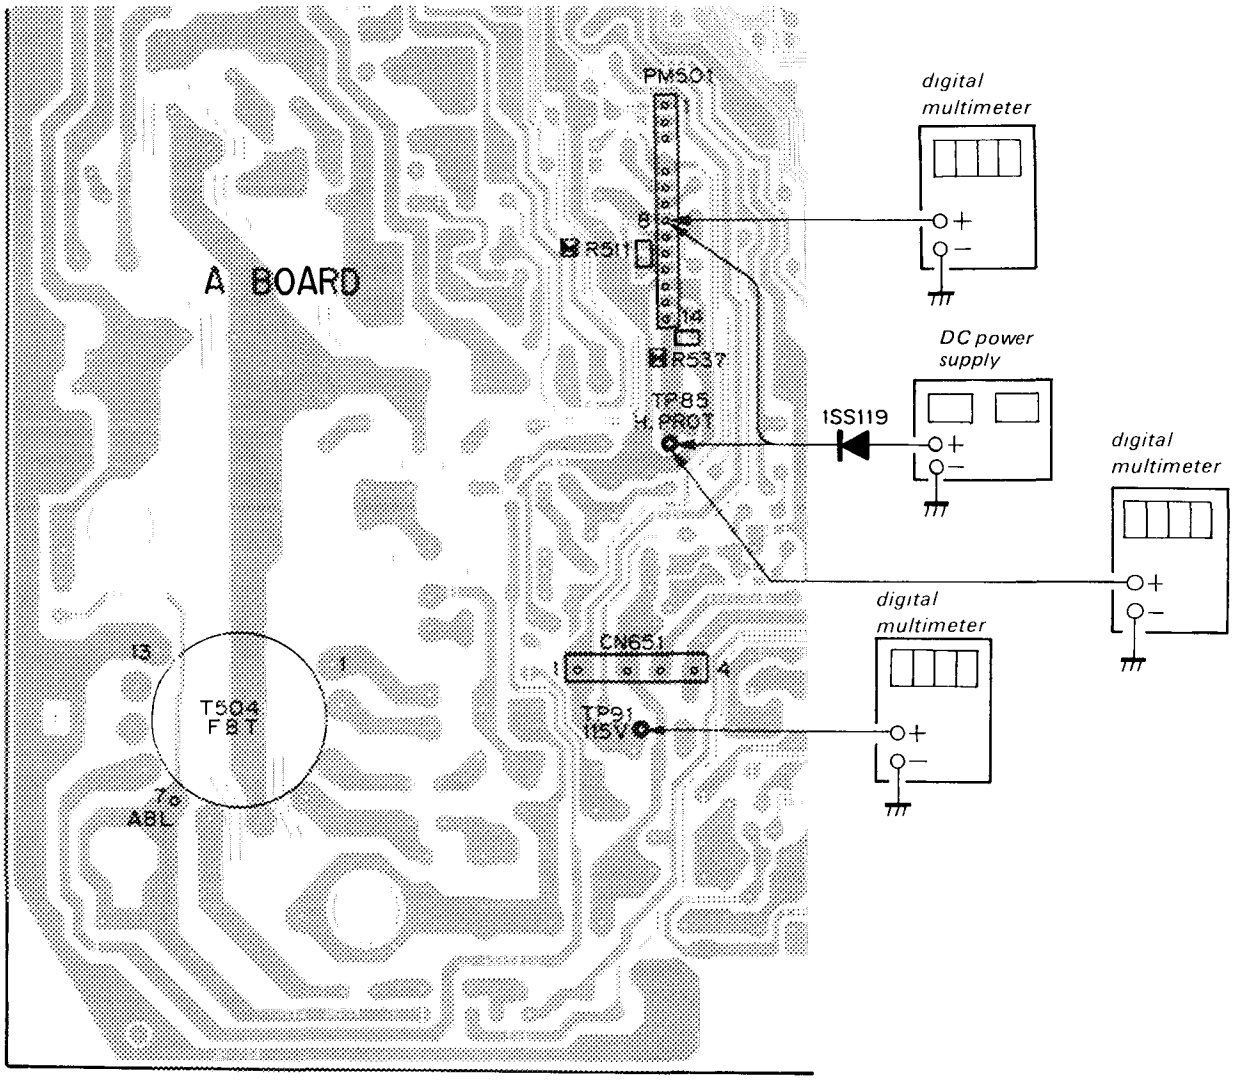

Downloaded from www.Manualslib.com manuals search engine

SECTION 5
CIRCUIT ADJUSTMENTS

5-1. ELECTRICAL ADJUSTMENT BY REMOTE COMMANDER

Use of Remote Commander (RM-Y116) can be performed circuit adjustments about this model.

NOTE · Test Equipment Required.
1. Pattern Generator
2. Frequency counter
3. Digital multimeter
4. Audio OSC

1. METHOD OF SETTING THE SERVICE ADJUSTMENT MODE

SERVICE MODE PROCEDURE

1. Standby mode.(Power off)
2. DISPLAY → 5 → VOL (+) → POWER on the Remote Commander. (Press each button within a second.)

SERVICE ADJUSTMENT MODE IN

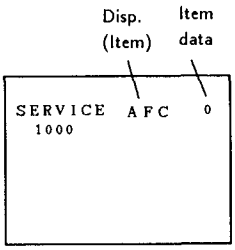

3. The CRT displays the item Being adjusted.
4. Press 1 or 4 on the Remote Commander to select the item.
5. Press 3 or 6 on the Remote Commander to change the data.
6. Press MUTING then ENTER to write into memory.

SERVICE ADJUSTMENT MODE MEMORY

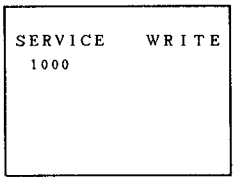

MUTING Green
↓
ENTER Red

7. Press 8 then ENTER on the Remote Commander to initlalize.

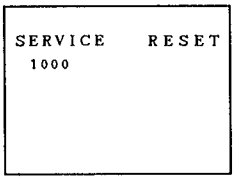

Carry out step 7) when adjusting IDs 0 to 4 and when replacing and adjusting IC102.

Factory original setting

8. Turn set off and on to exit.

2. MEMORY WRITE CONFIRMATION METHOD

1. After adjustment, pull out the plug from AC outlet, and next place, plug in AC outlet again.
2. Turn the power switch ON and set to Service Mode.
3. Call the adjusted items again, confirm they were adjusted.

3. ADJUST BUTTONS AND INDICATOR

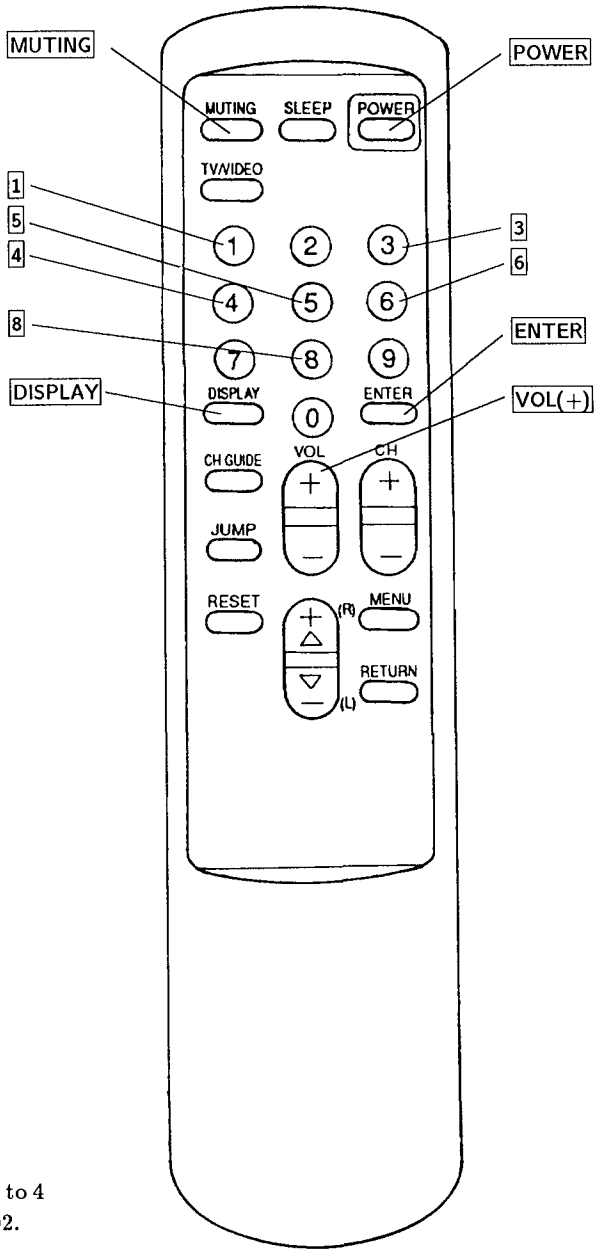

RM-Y116

Downloaded from www.Manualslib.com manuals search engine

4. AN ITEM OF ADJUSTMENTS

No.	Disp.	Ave. data	Data range	Item
1	AFC	* 0	0~3	AFC Loop Gain
2	HFRE	78	0~127	H. Frequency
3	VFRE	15	0~31	V. Frequency
4	VPOS	18	0~31	V. Center
5	VSIZ	16	0~63	V. Size
6	VLIN	9	0~15	V. Linearity
7	VSCO	6	0~15	V. Correction
8	HPOS	5	0~15	H. Center
9	HSIZ	not use	0~31	H. Size
10	PAMP	not use	0~31	Pin Amp
11	CPIN	not use	0~7	Corner Pin
12	PPHA	not use	0~15	Pin Phase
13	VCOM	* 2	0~7	V. Compensation
14	GAMP	19	0~31	Green Amp
15	BAMP	19	0~31	Blue Amp
16	GCUT	8	0~15	Green Cut Off
17	BCUT	7	0~15	Blue Cut Off
18	CROM	26	0~63	Chroma Trap
19	SPIX	24	0~63	Sub Contrast
20	SHUE	25	0~63	Sub Hue
21	SCOL	30	0~63	Sub Color
22	SBRT	25	0~63	Sub Bright
23	RGBP	* 18	0~63	RGB Picture
24	SHAP	* 7	0~15	Sharpness
25	VSMO	* 0	0, 1	V Pull in Range
26	REF	* 2	0~3	Refference line
27	ROFF	1	0, 1	Red Out
28	GOFF	1	0, 1	Green Out
29	BOFF	1	0, 1	Blue Out
30	ABLM	* 0	0, 1	ABL Mode
31	NOTC	* 0	0, 1	Notch On/Off
32	DRGB	* 0	0, 1	OSD intensity
33	VANG	not use	0~63	V. Angle
34	DISP	40	0~63	Display Position
35	SVOL	* 0	0~7	Sub Volume
36	SBAL	not use	0~7	Sub Balance
37	BASS	not use	0~15	Sub Bass
38	TRE	not use	0~15	Sub Treble
39	UYBO	not use	0~63	Upper Y. Bow
40	LYBO	not use	0~63	Lower Y. Bow
41	HAMP	not use	0~63	H. Amp
42	HTIL	not use	0~63	H. Tilt
43	UCBO	not use	0~63	Upper C. Bow
44	UTIL	not use	0~63	Upper Tilt
45	LCBO	not use	0~63	Lower C. Bow
46	LTIL	not use	0~63	Lower Tilt
47	DCSH	not use	0~63	DC. Shift
48	PHPO	not use	0~127	PinP H Position
49	PHUE	not use	0~63	PinP Hue
50	ID-0	* 96	0~127	Model ID
51	ID-1	* 33	0~127	Model ID
52	ID-2	* 64	0~127	Model ID
53	ID-3	* 0	0~127	Model ID
54	ID-4	* 16	0~127	Model ID

* : Set-up value

Note : No from 1 to 54 is to show adjusment order.

```
SERVICE   ID 0  96
 1000     1000000
```

Please adjust the function values as shown below when IC 102 on A board was replaced.

No.	Disp.	Disp.	Data
50	ID-0	1 1 0 0 0 0 0	96
51	ID-1	0 1 0 0 0 0 1	33
52	ID-2	1 0 0 0 0 0 0	64
53	ID-3	0 0 0 0 0 0 0	0
54	ID-4	0 0 1 0 0 0 0	16

Downloaded from www.Manualslib.com manuals search engine

5-2. A BOARD ADJUSTMENTS

RF AGC ADJUSTMENT(IF BLOCK VR)

1. Input a color-bar signal.
2. Adjust AGC VR of TU 101 so that snow noise and cross-modulation disappear from the picture.
3. Confirm them at every channel.

H.FREQUENCY ADJUSTMENT (HFRE)

1. Input a color-bar signal.
2. Set to Service adjustment Mode.
3. Connect a frequency counter to base of Q 550 (TP-86 H.DRIVE).
4. Call the item of AFC, set to 3 level (free run).
5. Select HFRE with 1 and 4.
6. Adjust with 3 and 6 for the 15734± 60 Hz.
7. Call the item of AFC again, adjust the level" 0 ".
8. Write into the memory by pressing MUTING then ENTER.

V.FREQUENCY ADJUSTMENT (VFRE)

1. Select video 1 with no connecting the signal.
2. Set to Service adjustment Mode.
3. Connect the frequency counter across connector VDY (+) (CN501) connector and ground.
4. Select VFRE with 1 and 4.
5. Adjust with 3 and 6 for the 55 ±0.5Hz.
6. Write the memory by pressing MUTING then ENTER .

CROMA TRAP ADJUSTMENT (CROM)

1. Input a red signal
2. Set to Service adjustment Mode.
3. Connect an oscilloscope CN703 Pin① (R OUT) of C board ground.
4. Select CROM with 1 and 4.
5. Adjust with 3 and 6 for the 0 level.

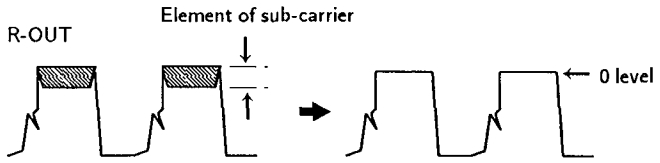

6. Write the memory by pressing MUTING then ENTER .

SUB CONTRAST ADJUSTMENT (SPIX)

1. Input a color-bar signal.
2. Set to Service adjustment Mode.
3. Set the conditions as follows.

PICTURE	·····	MAX
COLOR	·····	MIN
BRIGHT	·····	MIN

R OFF	·····	ON (1)
G OFF	·····	OFF (0)
B OFF	·····	OFF (0)

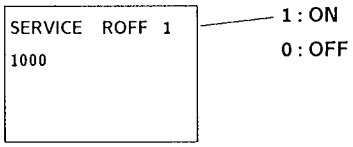

4. Connect an oscilloscope to CN703 Pin① (R OUT) of C board and ground.
5. Select SPIX with 1 and 4.
6. Adjust with 3 and 6 for the 1.9±0.05 Vp-p.

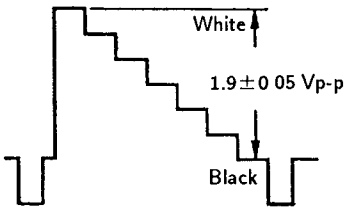

7. Write the memory by pressing MUTING then ENTER .
8. Return the following back to normal after adjustment.

PICTURE	·····	MAX
BRIGHT	·····	CENTER
COLOR	·····	CENTER
R OFF	·····	ON
G OFF	·····	ON
B OFF	·····	ON

Downloaded from www.Manualslib.com manuals search engine

DISPLAY POSITION ADJUSTMENT (DISP)

1. Input a color-bar signal.
2. Set to service adjustment Mode.
3. Select DISP with 1 and 4.
4. Adjust with 3 and 6 for the bar center.
5. Write the memory by pressing MUTING then ENTER .

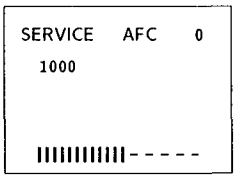

SUB BRIGHT ADJUSTMENT (SBRT)

1. Input a cross-hatch signal.
2. Set to service adjustment mode.
3. Set the PICTURE and BRIGHT to minimum.
4. Select SBRT with 1 and 4.
5. Adjust with 3 and 6 for obtain a faintly visible cross-hatch.
6. Write into the memory by pressing MUTING then ENTER .

SUB HUE, SUB COLOR ADJUSTMENT (SHUE, SCOL)

1. Input a color-bar signal.
2. Set to service adjustment Mode.
3. Connect an oscilloscope to CN703 Pin③ (B OUT) of C board.
4. Select SHUE and SCOL with 1 and 4.
5. Adjust with 3 and 6 for the V1=V4 (SCOR) and V2 =V3 (SHUE).

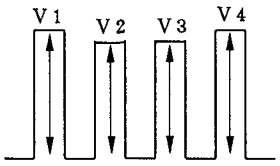

6. Write into the memory by pressing MUTING then ENTER .

V.SIZE ADJUSTMENT (VSIZ)

1. Input a cross-hatch signal.
2. Set to service adjustment Mode.
3. Select VSIZ with 1 and 4.
4. Adjust with 3 and 6 for the best vertical size.
5. Write into the memory by pressing MUTING then ENTER .

V. SIZE (VSIZ)



V.CENTER ADJUSTMENT (VPOS)

1. Input a cross-hatch signal.
2. Set to service adjustment Mode.
3. Select VPOS with 1 and 4.
4. Adjust with 3 and 6 for the best vertical senter.
5. Write into the memory by pressing MUTING then ENTER .

V. CENTER (VPOS)



H.CENTER ADJUSTMENT (H POS)

Note: Perform this adjustment after H.FREQUENCY ADJUSTMENT (HFRE) .

1. Input a cross-hatch signal.
2. Set the Service adjustment mode.
3. Set HPOS=7 by BUS computer.
4. Adjust H-center SW(S 551)of A board to get best point of H-center.
5. Select HPOS with 1 and 4 .
6. Adjust with 3 and 6 to the best horizontal center.
7. Write into the memory by pressing MUTING then ENTER .

H. CENTER (HPOS)



Downloaded from www.Manualslib.com manuals search engine

V LINEARITY(VLIN) AND VS CORRECTION(VSCO) ADJUSTMENTS

1. Input a cross-hatch signal.
2. Set to Service adjustment Mode.
3. Select VLIN and VSCO with 1 and 4.
4. Adjust with 3 and 6 for the best picture.
5. Write the memory byPressing MUTING then ENTER.

V LINEARITY (VLIN)

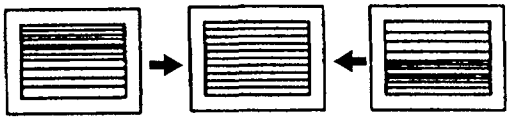

VS CORRECTION (VSCO)



Downloaded from www.Manualslib.com manuals search engine

KV-13V50 RM-Y116 KV-13V50 RM-Y116

KV-13V50 RM-Y116 KV-13V50 RM-Y116

SECTION 6
DIAGRAMS

6-1. BLOCK DIAGRAM

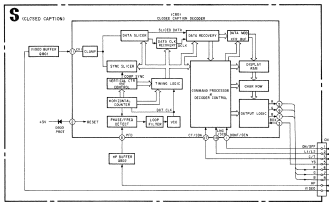

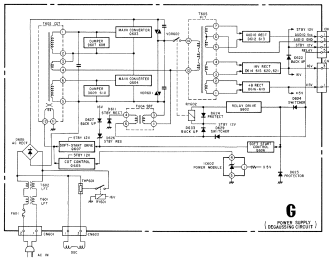

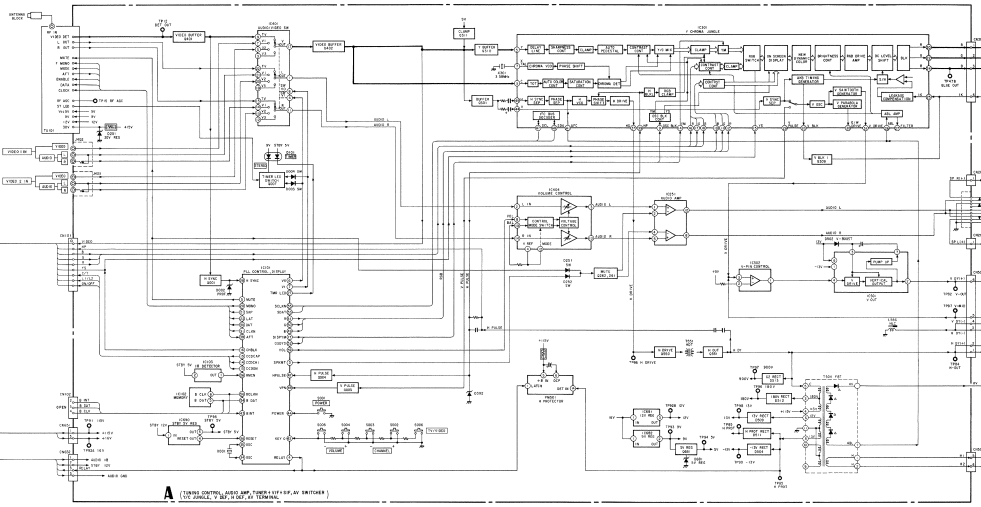

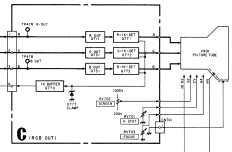

Downloaded from www.Manualslib.com manuals search engine

6-2. CIRCUIT BOARDS LOCATION

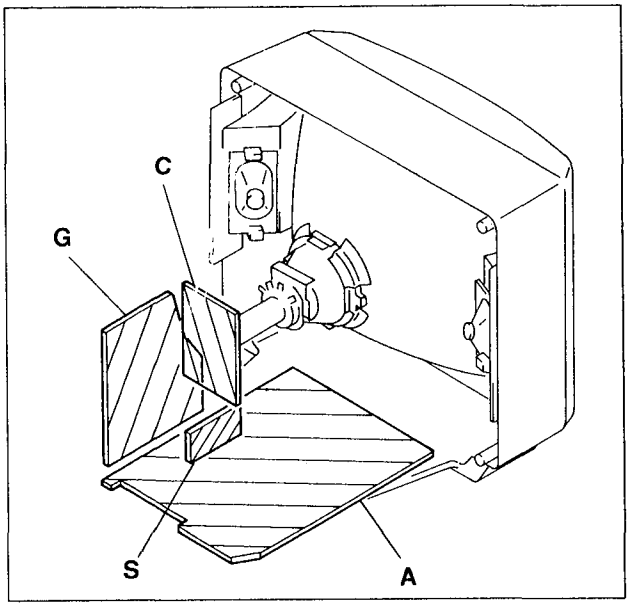

6-3. PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS

Note:

- All capacitors are in µF unless otherwise noted
  pF: µµF 50WV or less are not indicated except for electrolytic and tantalums
- All electrolytics are in 50V unless otherwise specified
- Indication of resistance, which does not have one for rating electrical power, is as follows

Pitch: 5 mm
Rating electrical power 1/4W

- Chips resistors are 1/10W
- All resistors are in ohms
  kΩ=1000Ω, MΩ=1000KΩ
- nonflammable resistor
- fusible resistor
- △: internal component
- ▭: panel designation, and adjustment for repair
- All variable and adjustable resistors have characteristic curve B, unless otherwise noted
- The components identified by ◪ in this manual have been carefully factory-selected for each set in order to satisfy regulations regarding X-ray radiation
  Should replacement be required, replace only with the value originally used.
- When replacing components identified by ◪, make the necessary adjustments indicated If results do not meet the specified value, change the component identified by ⊠ and repeat the adjustment until the specified value is achieved (Refer to R511 and R537 on page 24, 25)
- *When replacing the part in below table be sure to parform the related adjustment*

Part replaced (◪)		Adjustment (⊠)
C524, PM501, R511, R534, R549	A BOARD	B+ HOLD-DOWN (R511)
IC602, R637	G BOARD	
C523, C524, D511, PM501, R534, R535, R537, R549, T504	A BOARD	HOLD-DOWN (R537)
IC602, R637	G BOARD	
DY		

- All voltages are in V
- Voltage are dc with respect to ground unless otherwise noted
- Readings are taken with a 10 MΩ digital multimeter
- Readings are taken with a color-bar signal input
- Voltage variations may be noted due to normal production tolerance
- Circled numbers are waveform references
- B+ line
- B− line
- signal path (RF)

Reference information

RESISTOR	RN	METAL FILM
	: RC	SOLID
	FPRD	NONFLAMMABLE CARBON
	FUSE	NONFLAMMABLE FUSIBLE
	: RW	NONFLAMMABLE WIREWOUND
	: RS	NONFLAMMABLE METAL OXIDE
	RB	NONFLAMMABLE CEMENT
COIL	: LF-8L	MICRO INDUCTOR
CAPACITOR	: TA	TANTALUM
	PS	STYROL
	: PP	POLYPROPYLENE
	PT	MYLAR
	: MPS	METALIZED POLYESTER
	MPP	METALIZED POLYPROPYLENE
	: ALB	BIPOLAR
	· ALT	HIGH TEMPERATURE
	: ALR	HIGH RIPPLE

Note: The symbol display is on the component side.

The components identified by shading and mark ⚠ are critical for safety. Replace only with part number specified.

The symbol indicate fast operating fuse. Replace only with fuse of same rating as marked.

Note: Les composants identifiés par un tramé et une marque ⚠ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

Le symbole indique une fusible a action rapide. Doit etre remplacee par une fusible de meme yaleur, comme maque.

Downloaded from www.Manualslib.com manuals search engine

A [TUNING CONTROL, Y/C/JUNGLE, TUNER + VIF + MTS
VERTICAL DEFLECTION, AUDIO AMP, HORIZONTAL DEFLECTION,
AV SWITCHER, AV TERMINAL]

— A Board —

IC		DIODE	
IC101	D-11	D002	D-11
IC102	B-12	D003	D-12
IC103	B-13	D004	E-12
IC251	I-12	D005	C-11
IC301	H-9	D006	F-8
IC401	I-4	D009	E-13
IC404	F-8	D101	F-13
IC501	C-9	D201	E-3
IC502	C-8	D251	G-12
IC681	G-3	D262	F-12
IC682	G-3	D302	F-10
IC690	B-11	D418	G-7
PM-501	E-6	D502	B-9
		D504	D-4
		D509	D-11
		D511	D-4
		D512	D-2
		D513	C-4
		D681	G-4

TRANSISTOR		TEST POINT	
Q001	E-11	TP15	F-5
Q004	B-11	TP82	D-6
Q005	B-12	TP84	C-5
Q007	F-13	TP85	E-5
Q261	G-12	TP86	D-5
Q262	G-11	TP87	C-7
Q301	E-9	TP89	D-1
Q309	G-8	TP91	D-2
Q310	I-10	TP92A	G-2
Q311	I-9	TP92B	G-4
Q401	H-6	TP93	G-3
Q402	J-6	TP94	H-4
Q550	D-5	TP96	D-2
Q651	B-6	TP97	C-4
Q681	H-6	TP99	D-4

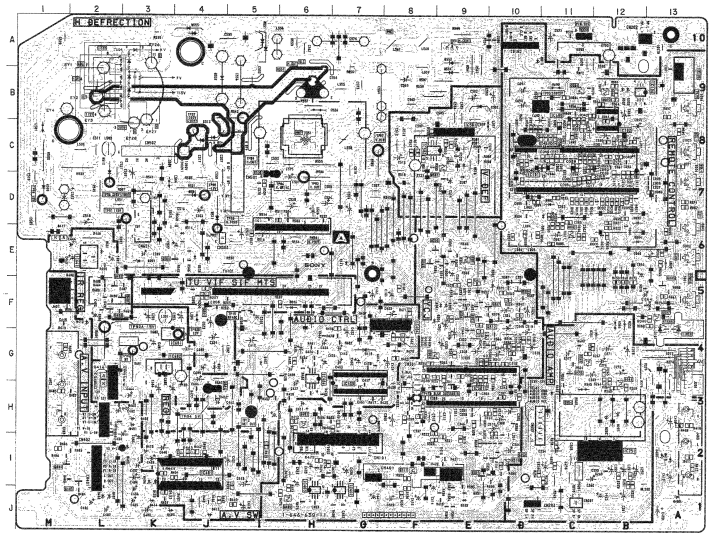

NOTE:
The circuit indicated as left contains high voltage of over 600 Vp-p. Care must be paid to prevent an electric shock in inspection or repairing.

A BOARD IC103 SBX1618-51

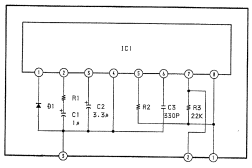

A BOARD IC301 CXA1465AS

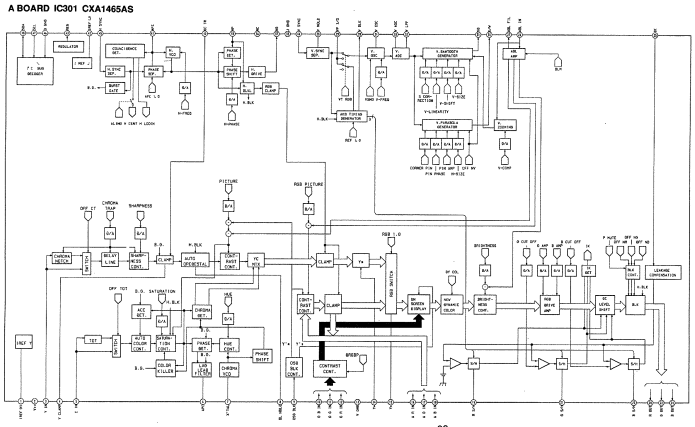

Downloaded from www.Manualslib.com manuals search engine

A BOARD IC401 M52470AP

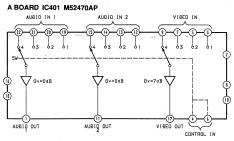

A BOARD IC404 M51132L

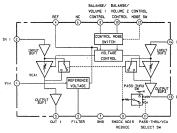

A BOARD IC501 LA7830

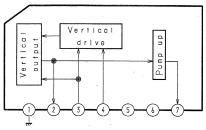

A BOARD IC690 L78LR05D

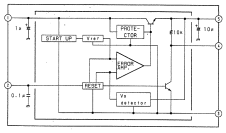

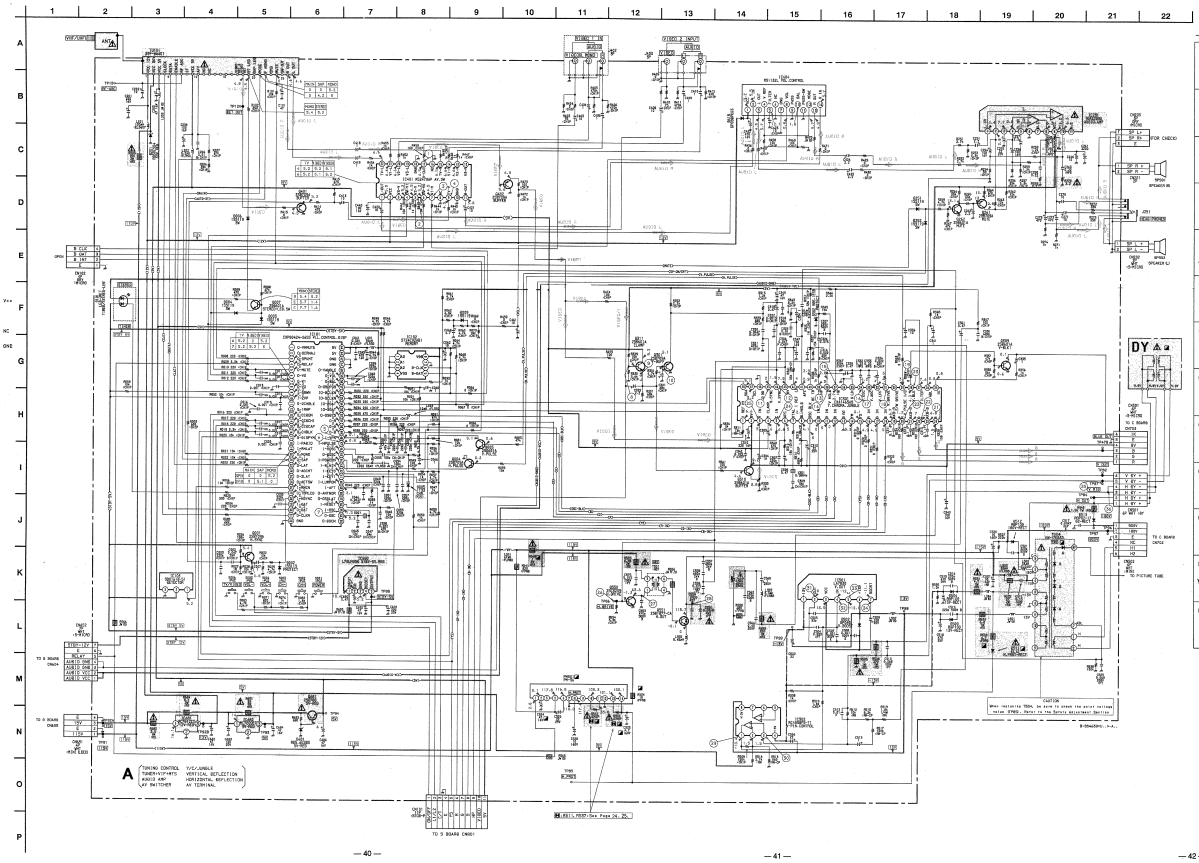

— A Board —

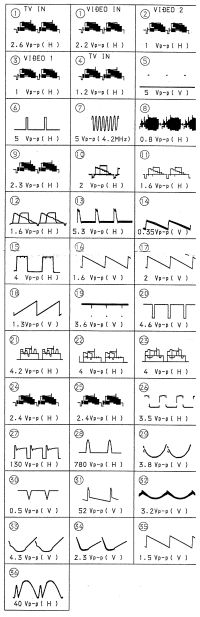

Downloaded from www.Manualslib.com manuals search engine

S BOARD IC801 Z8612812PSC

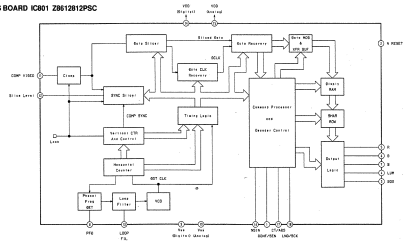
Pulse Driver
Pulse Generator
Pulse MOD & APC Ref
Pulse CLK Generator
Clamp
SYNC Separator
COMP SYNC
Timing Logic
Vertical STB and Control
Horizontal Counter
HOT CLK
Protect Free det
Lock Filter
HCD
Brightness RAM
Brightness ROM
Contrast Processor and Counter Control
Output Logic
R
G
B
LUM
BUS
S RESET
COMP VIDEO
Blink Level
Lock
PFB
LOOP FIL
Vert Blanking Interrupt
Vert Blanking Interrupt
BUS
BUS
BUS

S [CLOSED CAPTION]

— S Board —

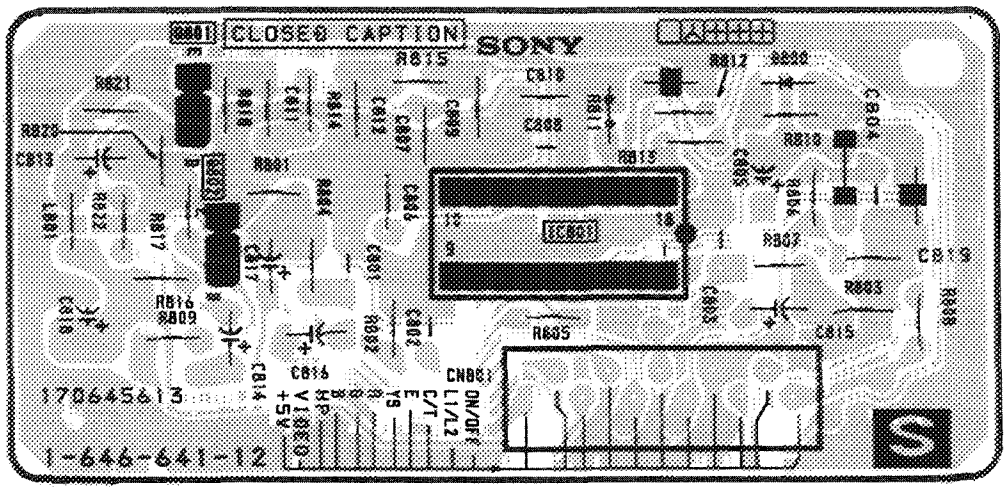

Downloaded from www.Manualslib.com manuals search engine

G [POWER SUPPLY, DEGAUSSING CIRCUIT]

— G Board —

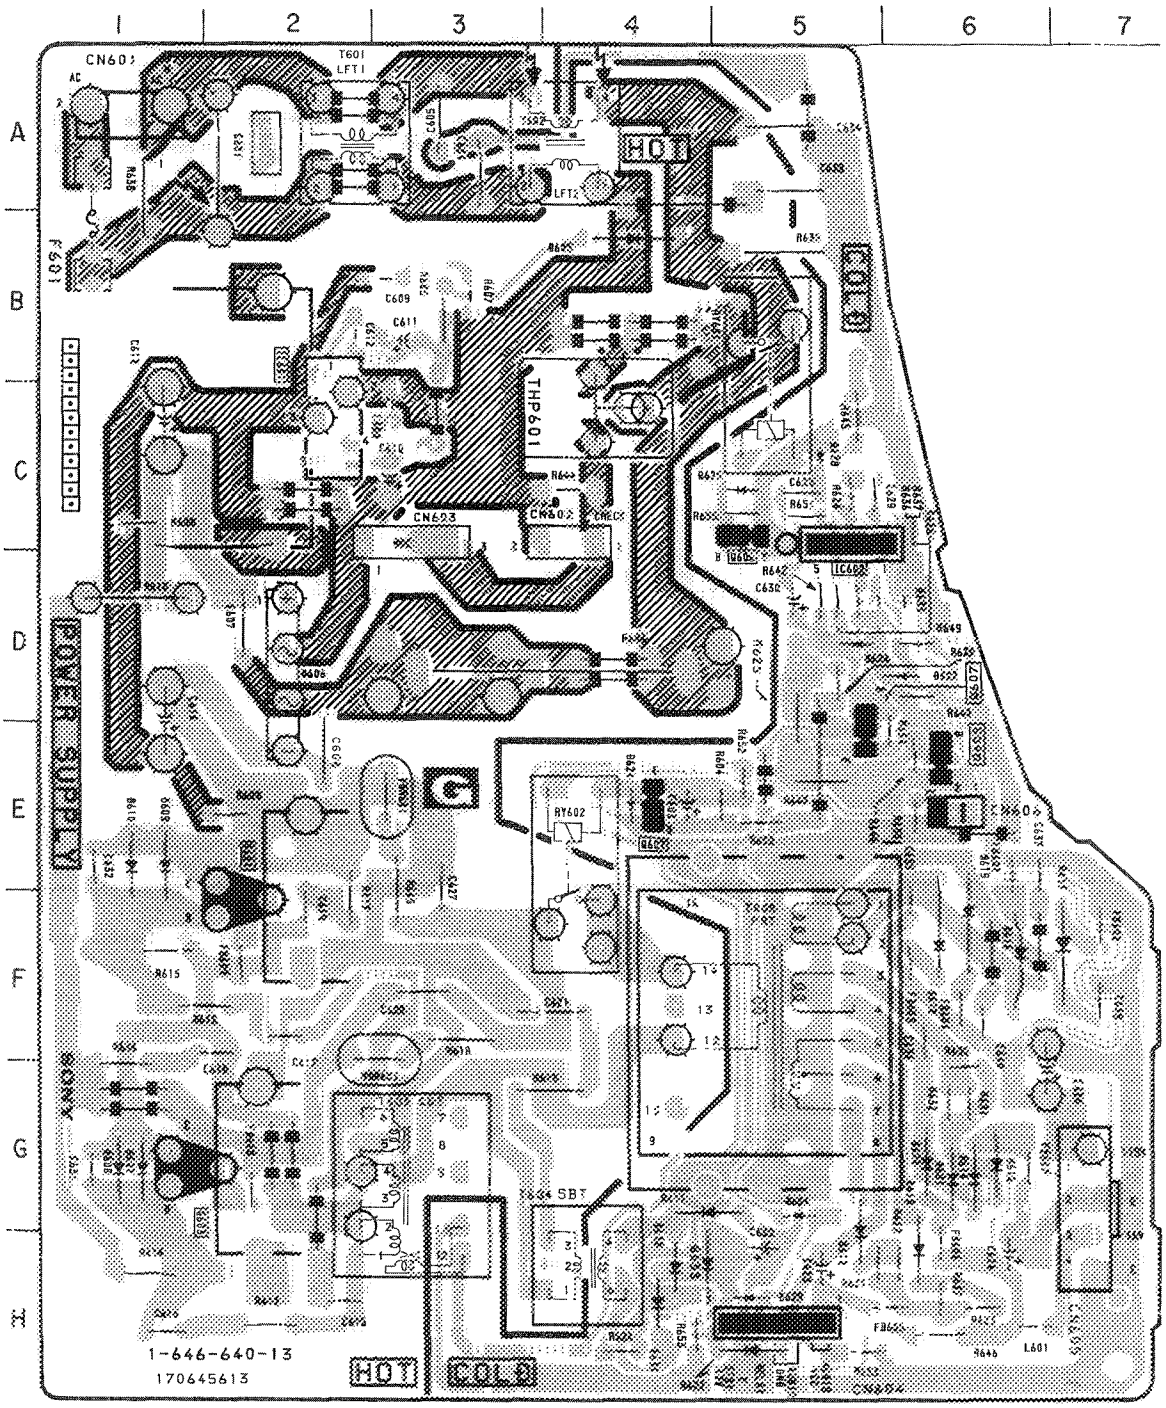

— G Board —

IC	
IC602	C-5
TRANSISTOR	
Q602	E-4
Q603	G-1
Q604	F-2
Q605	E-6
Q606	C-5
Q607	E-5
DIODE	
D604	G-5
D606	D-2
D607	G-1
D608	G-1
D609	E-1
D610	E-1
D611	G-4
D612	H-5
D613	H-6
D614	G-6
D615	F-6
D616	F-6
D617	F-7
D618	F-6
D619	F-6
D620	G-6
D621	G-6
D622	H-5
D624	E-4
D625	C-5
D626	D-5
D627	D-6
D629	H-5
D633	H-4

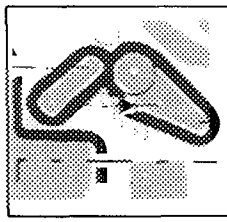

NOTE:
The circuit indicated as left contains high voltage of over 600 Vp-p. Care must be paid to prevent an electric shock in inspection or repairing.

Downloaded from www.Manualslib.com manuals search engine

C [RGB OUT]

— C Board —

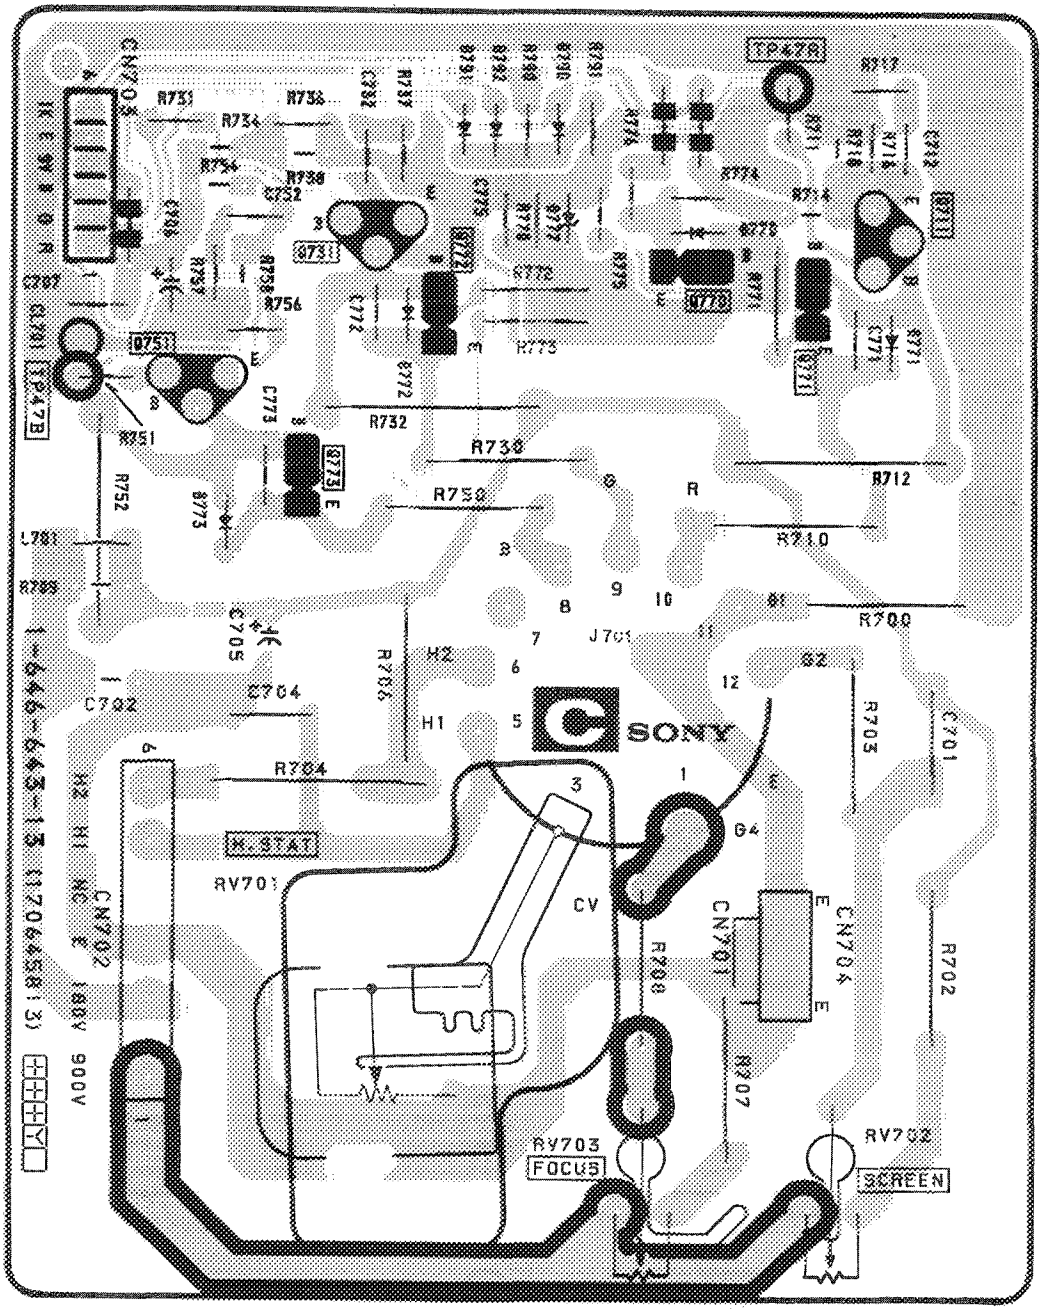

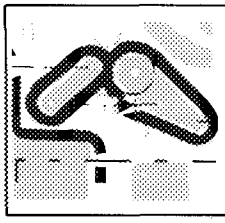

NOTE:
The circuit indicated as left contains high voltage of over 600 Vp-p. Care must be paid to prevent an electric shock in inspection or repairing.

Downloaded from www.Manualslib.com manuals search engine

6-4. SEMICONDUCTORS

CXA1465AS

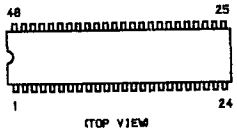

CXP8024-065S

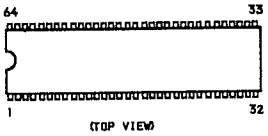

LA7830

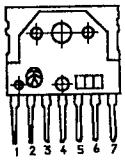

LM7812CT
MC7812CT
MC7809CT
NJM78M09FA
NJM7812FA
TA7809S



L78LR05Đ-MA

MC144143
Z8612812PSC

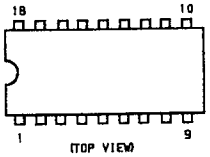

M51132L



M52470AP
M52470P

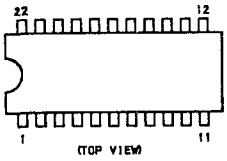

PM-36

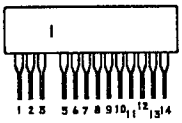

RC4558PS



SBX1618-51
SBX1618-59



ST24C02AB1

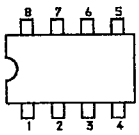

TĐA2009A

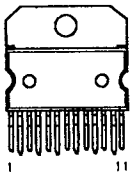

2SA1037K
2SA1162
2SB709A
2SC2412K
2SĐ601A



2SA1175
2SA1309A
2SC2785
2SC3311A

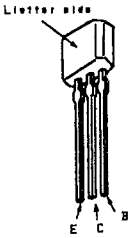

2SB1370

2SA10910
2SA1091-0

2SC3271
2SC2611

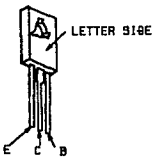

2SC3209LK
2SĐ774

2SC3271F



2SC4833MNP

2SĐ1877S



2SĐ788

Đ1NL20
EL1Z
EL1Z-V
GP08Đ
PKG3
RGP02-17PKG23
RGP10GPKG3



Đ1NS4
Đ1NS6
Đ1N20R
RĐ13ESB
RĐ13ESB2
RĐ30ESB2
RĐ30ESB3
RĐ30ESB4
RĐ33ESB1
RĐ33ESB2
RĐ3.9ESB1
RĐ5.1ESB
RĐ5.1ESB1
RĐ5.6ESB3
RĐ9.1ESB3
1SS119
1SS119TĐ
1SS133

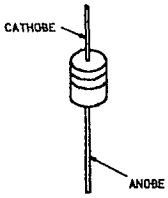

Đ4SB60L

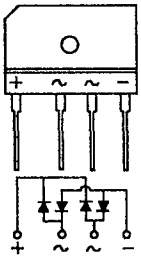

RGP02-17EL-6433



1T33

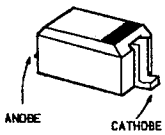

Downloaded from www.Manualslib.com manuals search engine

SECTION 7
EXPLODED VIEW

NOTE
- Items with no part number and no description are not stocked because they are seldom required for routine service
- The construction parts of an assembled part are indicated with a collation number in the remark column
- Items marked "*" are not stocked since they are seldom required for routine service Some delay should be anticipated when ordering these items

The components identified by shading and mark ⚠ are critical for safety
Replace only with part number specified

Les composants identifies par une trame et une marque ⚠ sont critiques pour la securite
Ne les remplacer que par une piece portant le numero specifie

7-1. CHASSIS

● : BVTP3x12 7-685-648-79
■ : BVTP4x16 7-685-663-79

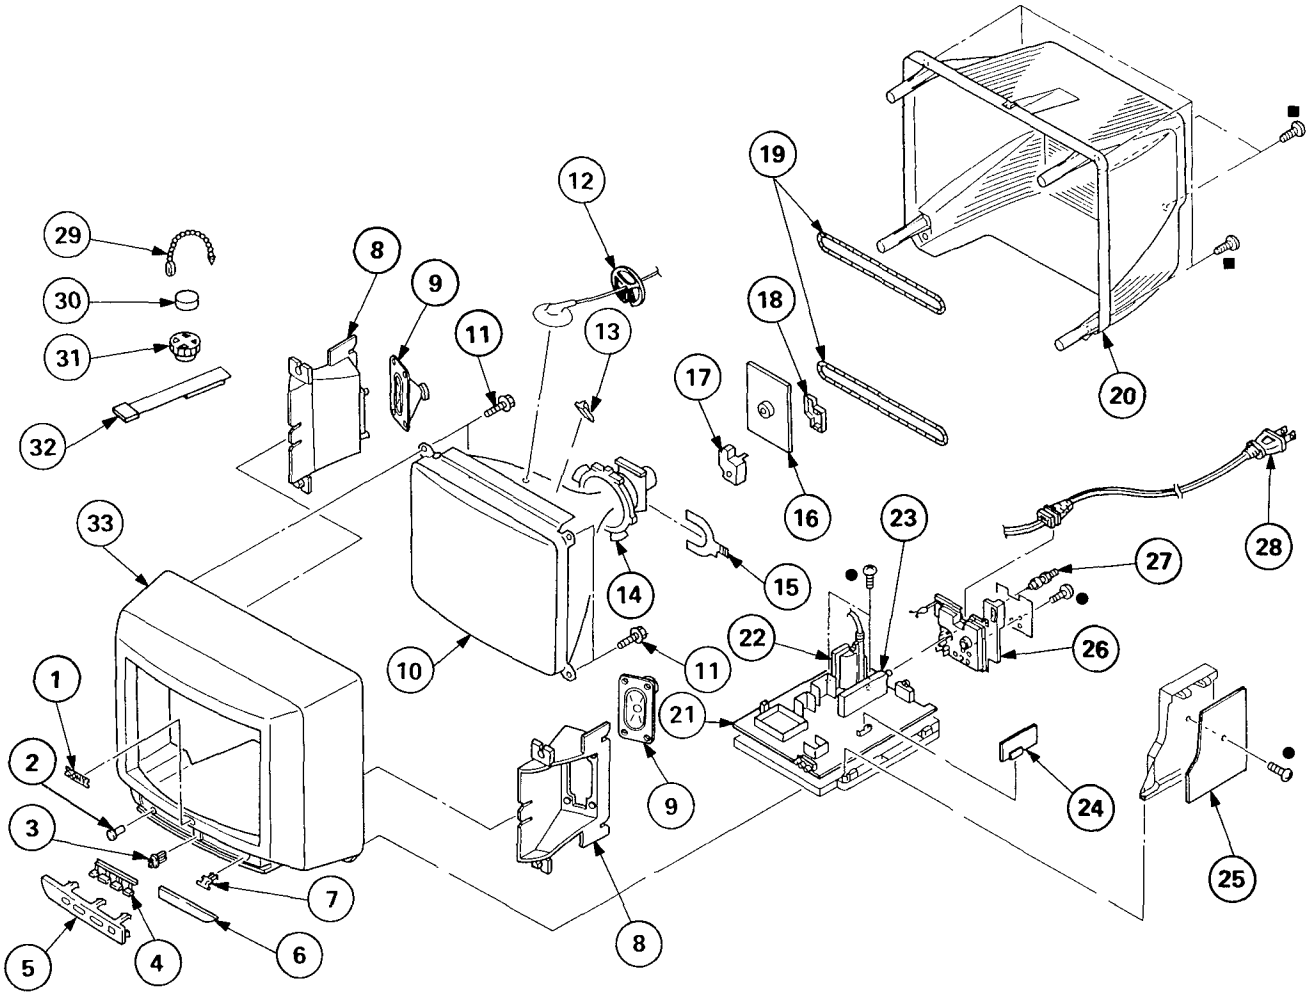

REF.NO	PART NO	DESCRIPTION	REMARK
1	4-393-157-01	ENBLEM (NO 6), SONY	
2	*4-389-517-01	GUIDE (R), LIGHT	
3	*4-031-413-01	GUIDE, LIGHT	
4	4-040-345-01	BUTTON, MULTI	
5	4-041-301-01	PANEL, CONTROL	
6	4-041-299-01	DOOR	
7	3-703-035-12	SHAFT, LID	
8	*4-041-302-01	BAFFLE, SPEAKER	
9	1 504-252-11	SPEAKER (9X5CM)	
10	⚠8-735-555-05	PICTURE TUBE (A34JBU10X)	
11	4-365-808-01	SCREW (5), TAPPING	
12	*3-704-372-01	HOLDER, HV CABLE	
13	4.041-361-01	SPACER, DY	
14	⚠1-451-249-31	DEFLECTION YOKE (Y14NDA2)	
15	1-452-277-00	MAGNET, BMC	
16	*A-1331-247-A	C BOARD, COMPLETE	
17	*4-374-912-01	COVER (MAIN), CV VOL	
18	*4-374 913-01	COVER (REAR LID), CV VOL	
19	⚠1-426-146-71	COIL, DEMAGNETIZATION	
20	4 041-213-01	COVER, REAR	
21	*A-1297-132-A	A BOARD, COMPLETE	
22	⚠1-453-142-11	TRANSFORMER ASSY, FLYBACK (NX-1702A	
23	⚠8-598-039-00	TUNER BTF-WA401	
24	*1 646 641-12	S BOARD	
25	*A-1316-147-A	G BOARD, COMPLETE	
26	4-039-601-01	TERMINAL BOARD, ANTENNA	
27	1-573-657-11	PLUG, F-PIN	
28	⚠1-751-057-21	CORD, POWER (WITH CONNECTOR) 10A/12	
29	4-308 870 00	CLIP, LEAD WIRE	
30	1-452-032-00	MAGNET,DISK; 10MM ϕ	
31	1-452-094-00	MAGNET,ROTATABLE DISK; 15MM ϕ	
32	X-4308-815-0	PERMALLOY ASSY, CONVERGENCE	
33	X-4031-280-1	CABINET ASSY (WITH BEZEL ASSY)	

Downloaded from www.Manualslib.com manuals search engine

A

SECTION 8
ELECTRICAL PARTS LIST

NOTE:

The components identified by shading and mark ⚠ are critical for safety
Replace only with part number specified

Les composants identifies par une trame et une marque ⚠ sont critiques pour la securite
Ne les remplacer que par une piece portant le numero specifie

- Items marked "*" are not stocked since they are seldom required for routine service Some delay should be anticipated when ordering these items
- All variable and adjustable resistors have characteristic curve B, unless otherwise noted

RESISTORS
- All resistors are in ohms
- F nonflammable

When indicating parts by reference number, please include the board name

CAPACITORS
- MF: µF, PF: µµF

COILS
- MMH: mH, UH µH

- The components identified by ⧗ in this manual have been carefully factory-selected for each set in order to satisfy regulations regarding X-ray radiation
Should replacement be required, replace only with the value originally used

REF NO.	PART NO.	DESCRIPTION			REMARK
	*A-1297-132-A	A BOARD, COMPLETE **********			
	4-382-854-11	SCREW (M3X10), P, SW (+)			
		<CAPACITOR>			
C002	1-163-809-11	CERAMIC CHIP 0.047MF	10%	25V	
C003	1-163-125-00	CERAMIC CHIP 220PF	5%	50V	
C007	1-124-903-11	ELECT 1MF	20%	50V	
C011	1-163-009-11	CERAMIC CHIP 0 001MF	10%	50V	
C012	1-163-009-11	CERAMIC CHIP 0 001MF	10%	50V	
C013	1-163-009-11	CERAMIC CHIP 0.001MF	10%	50V	
C014	1-163-009-11	CERAMIC CHIP 0.001MF	10%	50V	
C015	1-163-009-11	CERAMIC CHIP 0.001MF	10%	50V	
C016	1-163-009-11	CERAMIC CHIP 0.001MF	10%	50V	
C017	1-163-009-11	CERAMIC CHIP 0 001MF	10%	50V	
C018	1-163-009-11	CERAMIC CHIP 0.001MF	10%	50V	
C019	1-163-009-11	CERAMIC CHIP 0.001MF	10%	50V	
C020	1-163-009-11	CERAMIC CHIP 0.001MF	10%	50V	
C030	1-163-125-00	CERAMIC CHIP 220PF	5%	50V	
C039	1-163-125-00	CERAMIC CHIP 220PF	5%	50V	
C040	1-163-125-00	CERAMIC CHIP 220PF	5%	50V	
C041	1-163-009-11	CERAMIC CHIP 0.001MF	10%	50V	
C043	1-163-159-00	CERAMIC CHIP 12PF	2%	50V	
C045	1-126-103-11	ELECT 470MF	20%	16V	
C046	1-163-017-00	CERAMIC CHIP 0.0047MF	10%	50V	
C047	1-104-896-91	CERAMIC CHIP 24PF	2%	50V	
C049	1-163-125-00	CERAMIC CHIP 220PF	5%	50V	
C050	1-163-109-00	CERAMIC CHIP 47PF	5%	50V	
C051	1-163-125-00	CERAMIC CHIP 220PF	5%	50V	
C052	1-163-125-00	CERAMIC CHIP 220PF	5%	50V	
C053	1-163-121-00	CERAMIC CHIP 150PF	5%	50V	
C054	1-163-253-11	CERAMIC CHIP 120PF	5%	50V	
C055	1-163-125-00	CERAMIC CHIP 220PF	5%	50V	
C056	1-163-125-00	CERAMIC CHIP 220PF	5%	50V	
C057	1-163-125-00	CERAMIC CHIP 220PF	5%	50V	
C058	1-163-037-91	CERAMIC CHIP 0.022MF	10%	25V	
C059	1-163-125-00	CERAMIC CHIP 220PF	5%	50V	
C060	1-124-903-11	ELECT 1MF	20%	50V	
C062	1-124-907-11	ELECT 10MF	20%	50V	
C066	1-124-903 11	ELECT 1MF	20%	50V	
C068	1-124-927-11	ELECT 4.7MF	20%	50V	
C101	1-124-927-11	ELECT 4.7MF	20%	50V	
C201	1-124-120-11	ELECT 220MF	20%	16V	
C202	1-124-907-11	ELECT 10MF	20%	50V	
C203	1-124-477-11	ELECT 47MF	20%	16V	
C204	1-126-101-11	ELECT 100MF	20%	16V	
C206	1-163-009-11	CERAMIC CHIP 0.001MF	10%	50V	
C251	1-124-925-11	ELECT 2.2MF	20%	50V	
C254	1-126-101-11	ELECT 100MF	20%	16V	

REF.NO.	PART NO.	DESCRIPTION			REMARK
C255	1-124-916-11	ELECT 22MF	20%	25V	
C256	1-126-101-11	ELECT 100MF	20%	16V	
C257	1-124-925-11	ELECT 2 2MF	20%	50V	
C258	1-136-169-00	FILM 0.22MF	5%	50V	
C259	1-136-173-00	FILM 0.47MF	5%	50V	
C260	1-124-907-11	ELECT 10MF	20%	50V	
C261	1-124-556-11	ELECT 2200MF	20%	16V	
C262	1-124-925-11	ELECT 2 2MF	20%	50V	
C263	1-136-169-00	FILM 0 22MF	5%	50V	
C270	1-124-907-11	ELECT 10MF	20%	50V	
C271	1-124-907-11	ELECT 10MF	20%	50V	
C272	1-126-103-11	ELECT 470MF	20%	16V	
C273	1-126-103-11	ELECT 470MF	20%	16V	
C301	1-163-113-00	CERAMIC CHIP 68PF	5%	50V	
C304	1-124-907-11	ELECT 10MF	20%	50V	
C305	1-124-903-11	ELECT 1MF	20%	50V	
C306	1-163-035-00	CERAMIC CHIP 0.047MF		50V	
C307	1-163-125-00	CERAMIC CHIP 220PF	5%	50V	
C308	1-124-902-00	ELECT 0.47MF	20%	50V	
C309	1-163-099-00	CERAMIC CHIP 18PF	5%	50V	
C310	1-124-916-11	ELECT 22MF	20%	25V	
C311	1-137-399-11	FILM 0 1MF	5%	50V	
C312	1-137-399-11	FILM 0.1MF	5%	50V	
C313	1-137-399-11	FILM 0 1MF	5%	50V	
C314	1-163-037-91	CERAMIC CHIP 0.022MF	10%	25V	
C315	1-124-120-11	ELECT 220MF	20%	16V	
C318	1-163-117-00	CERAMIC CHIP 100PF	5%	50V	
C319	1-124-902-00	ELECT 0.47MF	20%	50V	
C320	1-163-017-00	CERAMIC CHIP 0.0047MF	10%	50V	
C321	1-163-005-11	CERAMIC CHIP 470PF	10%	50V	
C322	1-163-011-11	CERAMIC CHIP 0.0015MF	10%	50V	
C323	1-163-007-11	CERAMIC CHIP 680PF	10%	50V	
C324	1-124-903-11	ELECT 1MF	20%	50V	
C325	1-164-232-11	CERAMIC CHIP 0 01MF	10%	50V	
C326	1-137-417-91	FILM 0.015MF	10%	100V	
C327	1-102-244-00	CERAMIC 220PF	10%	500V	
C328	1-124-902-00	ELECT 0.47MF	20%	50V	
C329	1-124-925-11	ELECT 2.2MF	20%	50V	
C330	1-163-007-11	CERAMIC CHIP 680PF	10%	50V	
C332	1-136-169-00	FILM 0 22MF	5%	50V	
C333	1-136-169-00	FILM 0.22MF	5%	50V	
C334	1-163-037-91	CERAMIC CHIP 0 022MF	10%	25V	
C335	1-124-903-11	ELECT 1MF	20%	50V	
C336	1-124-907-11	ELECT 10MF	20%	50V	
C340	1-126-101-11	ELECT 100MF	20%	16V	
C341	1-124-902-00	ELECT 0 47MF	20%	50V	
C342	1-163-037-91	CERAMIC CHIP 0 022MF	10%	25V	
C345	1-124-477-11	ELECT 47MF	20%	16V	
C347	1-126-101-11	ELECT 100MF	20%	16V	
C403	1-124-907-11	ELECT 10MF	20%	50V	
C404	1-124-903-11	ELECT 1MF	20%	50V	

Downloaded from www.Manualslib.com manuals search engine

The components identified by shading and mark ⚠ are critical for safety
Replace only with part number specified

Les composants identifies par une trame et une marque ⚠ sont critiques pour la securite
Ne les remplacer que par une piece portant le numero specifie

A

REF NO.	PART NO.	DESCRIPTION				REMARK
C405	1-124-903-11	ELECT	1MF	20%	50V	
C408	1-124-907-11	ELECT	10MF	20%	50V	
C409	1-124-903-11	ELECT	1MF	20%	50V	
C410	1-124-903-11	ELECT	1MF	20%	50V	
C413	1-124-907-11	ELECT	10MF	20%	50V	
C418	1-124-903-11	ELECT	1MF	20%	50V	
C419	1-124-903-11	ELECT	1MF	20%	50V	
C420	1-124-907-11	ELECT	10MF	20%	50V	
C421	1-124-907-11	ELECT	10MF	20%	50V	
C422	1-126-103-11	ELECT	470MF	20%	16V	
C423	1-124-907-11	ELECT	10MF	20%	50V	
C424	1-124-925-11	ELECT	2.2MF	20%	50V	
C425	1-124-925-11	ELECT	2.2MF	20%	50V	
C440	1-126-101-11	ELECT	100MF	20%	16V	
C461	1-124-907-11	ELECT	10MF	20%	50V	
C501	1-124-902-00	ELECT	0.47MF	20%	50V	
C502	1-124-916-11	ELECT	22MF	20%	50V	
C504	1-130-489-00	FILM	0.033MF	5%	50V	
C505	1-164-058-11	CERAMIC	33PF	5%	50V	
C506	1-124-916-11	ELECT	22MF	20%	50V	
C507	1-102-038-00	CERAMIC	0.001MF		500V	
C508	1-102-038-00	CERAMIC	0.001MF		500V	
C509	1-124-122-11	ELECT	100MF	20%	35V	
C510	1-137-421-91	FILM	0.068MF	10%	100V	
C511 ⚠	1-137-417-91	FILM	0.015MF	10%	100V	
C512	1-164-096-11	CERAMIC	0.01MF		50V	
C513	1-124-903-11	ELECT	1MF	20%	50V	
C515	1-124-480-11	ELECT	470MF	20%	25V	
C516	1-102-244-00	CERAMIC	220PF	10%	500V	
C517	1-162-114-00	CERAMIC	0.0047MF		2KV	
C518	1-124-480-11	ELECT	470MF	20%	25V	
C519	1-102-244-00	CERAMIC	220PF	10%	500V	
C520	1-124-046-00	ELECT	10MF	20%	160V	
C521	1-102-244-00	CERAMIC	220PF	10%	500V	
C522	1-123-024-21	ELECT	33MF		160V	
C523	1-123-932-00	ELECT	4.7MF	20%	160V	
C524	1-124-477-11	ELECT	47MF	20%	16V	
C525	1-106-387-00	MYLAR	0.068MF	10%	200V	
C526	1-124-916-11	ELECT	22MF	20%	25V	
C528	1-124-046-00	ELECT	10MF	20%	160V	
C553	1-102-228-00	CERAMIC	470PF	10%	500V	
C554 ⚠	1-162-558-91	CERAMIC	1000PF	10%	2KV	
C555 ⚠	1-104-772-11	FILM	0.0068MF	3%	2KV	
C557	1-162-116-00	CERAMIC	680PF	10%	2KV	
C558	1-137-417-91	FILM	0.015MF	10%	100V	
C559	1-162-116-00	CERAMIC	680PF	10%	2KV	
C562	1-102-228-00	CERAMIC	470PF	10%	500V	
C564	1-136-108-00	FILM	0.43MF	5%	200V	
C568	1-124-634-11	ELECT	1MF	20%	250V	
C575	1-106-371-00	MYLAR	0.015MF		200V	
C682	1-124-477-11	ELECT	47MF	20%	16V	
C683	1-124-478-11	ELECT	100MF	20%	25V	
C684	1-124-477-11	ELECT	47MF	20%	16V	
C686	1-124-477-11	ELECT	47MF	20%	16V	
C690	1-124-902-00	ELECT	0.47MF	20%	50V	
C691	1-124-120-11	ELECT	220MF	20%	25V	
C692	1-124-477-11	ELECT	47MF	20%	16V	

<CONNECTOR>

REF.NO.	PART NO.	DESCRIPTION	REMARK
CN101	1-573-978-21	CONNECTOR, BOARD TO BOARD 11P	
CN102	*1-560-124-00	PLUG, CONNECTOR (2.5MM) 4P	
CN201	1-564-505-11	PLUG, CONNECTOR 2P	
CN202	1-564-505-11	PLUG, CONNECTOR 2P	
CN203	*1-560-123-00	PLUG, CONNECTOR (2 5MM) 3P	
CN301	*1-564-509-11	PLUG, CONNECTOR 6P	
CN501	*1-580-798-11	CONNECTOR PIN (DY) 6P	
CN502	*1-508-768-00	PIN, CONNECTOR (5MM PITCH) 6P	
CN651	*1-691-135-11	PIN, CONNECTOR (PC BOARD) 4P	
CN652	1-564-510-11	PLUG, CONNECTOR 7P	

<DIODE>

REF.NO.	PART NO.	DESCRIPTION	REMARK
D002	8-719-911-19	DIODE 1SS119	
D003	8-719-911-19	DIODE 1SS119	
D004	8-719-911-19	DIODE 1SS119	
D005	8-713-300-57	DIODE 1T33	
D006	8-719-911-19	DIODE 1SS119	
D009	8-719-911-19	DIODE 1SS119	
D101	1-810-039-11	LED UNIT (TIMER/STAND BY)	
D201	8-719-110-72	DIODE RD30ESB2	
D251	8-719-911-19	DIODE 1SS119	
D252	8-719-911-19	DIODE 1SS119	
D302	8-719-109-84	DIODE RD5.1ESB1	
D418	8-719-936-82	DIODE GP08DPKG3	
D502	8-719-936-82	DIODE GP08DPKG3	
D504	8-719-302-44	DIODE EL1Z-V1	
D509	8-719-302-44	DIODE EL1Z-V1	
D511 ⚠	8-719-302-44	DIODE EL1Z-V1	
D512	8-719-302-44	DIODE EL1Z-V1	
D513	8-719-028-72	DIODE RGP02-17EL-6433	
D681	8-719-109-90	DIODE RD5 6ESB3	

<IC>

REF.NO.	PART NO.	DESCRIPTION	REMARK
IC101	8-752-841-16	IC CXP80424-065S	
IC102	8-759-168-37	IC ST24C02B1	
IC103	8-741-100-62	IC SBX1618-51	
IC251 ⚠	8-759-980-43	IC TDA2030A	
IC301	8-752-059-67	IC CXA1465AS	
IC401	8-759-634-69	IC M52470P	
IC404	8-759-069-14	IC M51132L	
IC501	8-759-801-98	IC LA7830	
IC502	8-759-996-43	IC RC4558PS	
IC681 ⚠	8-759-013-00	IC KC7812CT	
IC682 ⚠	8-759-030-99	IC KC7805CT	
IC690 ⚠	8-759-805-37	IC L78L05CV-BA	

<JACK>

REF.NO.	PART NO.	DESCRIPTION	REMARK
J251	1-750-264-11	JACK	
J402	1-750-278-11	JACK BLOCK, PIN 3P	
J403	1-750-267-11	JACK BLOCK, PIN (L TYPE) 3P	

<COIL>

REF.NO.	PART NO.	DESCRIPTION	REMARK
L001	1-410-470-11	INDUCTOR 10UH	
L002	1-410-476-11	INDUCTOR 33UH	
L003	1-410-470-11	INDUCTOR 10UH	
L201	1-410-645-31	INDUCTOR 100UH	
L202	1-408-408-00	INDUCTOR 8 2UH	
L502	1-410-669-31	INDUCTOR 33UH	
L503 ⚠	1-412-531-61	INDUCTOR 33UH	
L551	1-412-533-61	INDUCTOR 47UH	
L555	1-410-396-41	FERRITE BEAD INDUCTOR 0 45UH	
L556 ⚠	1-459-760-13	COIL, HORIZONTAL LINEARITY	
L557	1-412-553-61	INDUCTOR 3 3MMH	

Downloaded from www.Manualslib.com manuals search engine

A

Les composants identifies par une trame et une marque ⚠ sont critiques pour la securite
Ne les remplacer que par une piece portant le numero specifie

The components identified by shading and mark ⚠ are critical for safety
Replace only with part number specified

REF NO.	PART NO.	DESCRIPTION	REMARK
		<MODULE>	
PM501	1-810-041-11	PROTECTOR MODULE PM-36	
		<IC LINK>	
FS201	1-932-675-91	LINK, IC 1.5A	
		<TRANSISTOR>	
Q001	8-729-422-36	TRANSISTOR 2SB709A-Q	
Q004	8-729-422-36	TRANSISTOR 2SB709A-Q	
Q005	8-729-422-27	TRANSISTOR 2SD601A-Q	
Q007	8-729-422-27	TRANSISTOR 2SD601A-Q	
Q261	8-729-422-36	TRANSISTOR 2SB709A-Q	
Q262	8-729-422-27	TRANSISTOR 2SD601A-Q	
Q301	8-729-422-36	TRANSISTOR 2SB709A-Q	
Q309	8-729-422-27	TRANSISTOR 2SD601A-Q	
Q310	8-729-422-27	TRANSISTOR 2SD601A-Q	
Q311	8-729-422-27	TRANSISTOR 2SD601A-Q	
Q401	8-729-422-36	TRANSISTOR 2SB709A-Q	
Q402	8-729-422-36	TRANSISTOR 2SB709A-Q	
Q550	8-729-140-96	TRANSISTOR 2SD774-34	
Q551	8-729-810-49	TRANSISTOR 2SD1877S-SONY-CA	
Q681 ⚠	8-729-320-61	TRANSISTOR 2SD788-3477	
		<RESISTOR>	
R001	1-216-073-00	METAL GLAZE 10K 5% 1/10W	
R003	1-216-045-00	METAL GLAZE 680 5% 1/10W	
R004	1-216-033-00	METAL GLAZE 220 5% 1/10W	
R005	1-216-033-00	METAL GLAZE 220 5% 1/10W	
R006	1-216-073-00	METAL GLAZE 10K 5% 1/10W	
R008	1-216-033-00	METAL GLAZE 220 5% 1/10W	
R009	1-216-061-00	METAL GLAZE 3.3K 5% 1/10W	
R010	1-216-033-00	METAL GLAZE 220 5% 1/10W	
R011	1-216-033-00	METAL GLAZE 220 5% 1/10W	
R012	1-216-033-00	METAL GLAZE 220 5% 1/10W	
R016	1-216-033-00	METAL GLAZE 220 5% 1/10W	
R017	1-216-033-00	METAL GLAZE 220 5% 1/10W	
R018	1-216-033-00	METAL GLAZE 220 5% 1/10W	
R019	1-216-061-00	METAL GLAZE 3.3K 5% 1/10W	
R020	1-216-073-00	METAL GLAZE 10K 5% 1/10W	
R021	1-216-073-00	METAL GLAZE 10K 5% 1/10W	
R022	1-216-073-00	METAL GLAZE 10K 5% 1/10W	
R023	1-216-033-00	METAL GLAZE 220 5% 1/10W	
R025	1-216-039-00	METAL GLAZE 390 5% 1/10W	
R026	1-216-097-00	METAL GLAZE 100K 5% 1/10W	
R027	1-216-121-00	METAL GLAZE 1M 5% 1/10W	
R028	1-216-073-00	METAL GLAZE 10K 5% 1/10W	
R029	1-216-065-00	METAL GLAZE 4.7K 5% 1/10W	
R030	1-216-073-00	METAL GLAZE 10K 5% 1/10W	
R031	1-216-033-00	METAL GLAZE 220 5% 1/10W	
R032	1-216-033-00	METAL GLAZE 220 5% 1/10W	
R033	1-216-033-00	METAL GLAZE 220 5% 1/10W	
R034	1-216-033-00	METAL GLAZE 220 5% 1/10W	
R035	1-216-041-00	METAL GLAZE 470 5% 1/10W	
R036	1-216-033-00	METAL GLAZE 220 5% 1/10W	
R037	1-216-033-00	METAL GLAZE 220 5% 1/10W	
R038	1-216-033-00	METAL GLAZE 220 5% 1/10W	
R039	1-216-049-00	METAL GLAZE 1K 5% 1/10W	
R040	1-216-033-00	METAL GLAZE 220 5% 1/10W	
R041	1-216-033-00	METAL GLAZE 220 5% 1/10W	
R042	1-216-295-00	METAL GLAZE 0 5% 1/10W	
R043	1-216-295-00	METAL GLAZE 0 5% 1/10W	
R044	1-216-065-00	METAL GLAZE 4.7K 5% 1/10W	
R045	1-216-065-00	METAL GLAZE 4.7K 5% 1/10W	
R046	1-216-065-00	METAL GLAZE 4.7K 5% 1/10W	
R047	1-216-049-00	METAL GLAZE 1K 5% 1/10W	
R048	1-216-073-00	METAL GLAZE 10K 5% 1/10W	
R049	1-216-025-00	METAL GLAZE 100 5% 1/10W	
R050	1-216-049-00	METAL GLAZE 1K 5% 1/10W	
R051	1-216-073-00	METAL GLAZE 10K 5% 1/10W	
R052	1-216-065-00	METAL GLAZE 4.7K 5% 1/10W	
R054	1-216-049-00	METAL GLAZE 1K 5% 1/10W	
R055	1-216-073-00	METAL GLAZE 10K 5% 1/10W	
R056	1-216-065-00	METAL GLAZE 4.7K 5% 1/10W	
R057	1-216-065-00	METAL GLAZE 4.7K 5% 1/10W	
R059	1-216-065-00	METAL GLAZE 4.7K 5% 1/10W	
R061	1-216-065-00	METAL GLAZE 4.7K 5% 1/10W	
R062	1-216-069-00	METAL GLAZE 6.8K 5% 1/10W	
R063	1-216-065-00	METAL GLAZE 4.7K 5% 1/10W	
R064	1-216-065-00	METAL GLAZE 4.7K 5% 1/10W	
R065	1-216-065-00	METAL GLAZE 4.7K 5% 1/10W	
R066	1-216-295-00	METAL GLAZE 0 5% 1/10W	
R067	1-216-295-00	METAL GLAZE 0 5% 1/10W	
R069	1-216-295-00	METAL GLAZE 0 5% 1/10W	
R071	1-216-047-00	METAL GLAZE 820 5% 1/10W	
R073	1-216-079-00	METAL GLAZE 18K 5% 1/10W	
R074	1-216-049-00	METAL GLAZE 1K 5% 1/10W	
R078	1-249-429-11	CARBON 10K 5% 1/4W	
R081	1-216-073-00	METAL GLAZE 10K 5% 1/10W	
R082	1-216-055-00	METAL GLAZE 1.8K 5% 1/10W	
R083	1-249-437-11	CARBON 47K 5% 1/4W	
R085	1-216-065-00	METAL GLAZE 4.7K 5% 1/10W	
R086	1-216-295-00	METAL GLAZE 0 5% 1/10W	
R088	1-216-089-91	METAL GLAZE 47K 5% 1/10W	
R089	1-216-041-00	METAL GLAZE 470 5% 1/10W	
R091	1-216-089-91	METAL GLAZE 47K 5% 1/10W	
R092	1-216-073-00	METAL GLAZE 10K 5% 1/10W	
R093	1-216-049-00	METAL GLAZE 1K 5% 1/10W	
R095	1-216-033-00	METAL GLAZE 220 5% 1/10W	
R096	1-216-033-00	METAL GLAZE 220 5% 1/10W	
R097	1-216-033-00	METAL GLAZE 220 5% 1/10W	
R101	1-216-073-00	METAL GLAZE 10K 5% 1/10W	
R102	1-216-039-00	METAL GLAZE 390 5% 1/10W	
R203 ⚠	1-215-899-91	METAL OXIDE 15K 5% 2W	
R206	1-216-089-11	METAL GLAZE 39K 5% 1/10W	
R207	1-216-083-00	METAL GLAZE 27K 5% 1/10W	
R251	1-216-059-00	METAL GLAZE 2.7K 5% 1/10W	
R252	1-216-059-00	METAL GLAZE 2.7K 5% 1/10W	
R253	1-216-061-00	METAL GLAZE 3.3K 5% 1/10W	
R254	1-216-015-00	METAL GLAZE 39 5% 1/10W	
R256	1-216-015-00	METAL GLAZE 39 5% 1/10W	
R257	1-216-061-00	METAL GLAZE 3.3K 5% 1/10W	
R258	1-216-051-00	METAL GLAZE 1.2K 5% 1/10W	
R259	1-216-051-00	METAL GLAZE 1.2K 5% 1/10W	
R262	1-216-075-00	METAL GLAZE 12K 5% 1/10W	
R263	1-216-075-00	METAL GLAZE 12K 5% 1/10W	
R264	1-216-041-00	METAL GLAZE 470 5% 1/10W	
R265	1-216-085-00	METAL GLAZE 33K 5% 1/10W	
R266	1-216-085-00	METAL GLAZE 33K 5% 1/10W	
R267	1-216-089-91	METAL GLAZE 47K 5% 1/10W	
R268	1-216-065-00	METAL GLAZE 4.7K 5% 1/10W	
R269 ⚠	1-247-767-91	CARBON 2.2 5% 1/4W	
R270 ⚠	1-247-767-91	CARBON 2.2 5% 1/4W	
R271	1-249-417-11	CARBON 1K 5% 1/4W	

Downloaded from www.Manualslib.com manuals search engine

A

The components identified by shading and mark ⚠ are critical for safety
Replace only with part number specified

Les composants identifies par une trame et une marque ⚠ sont critiques pour la securite
Ne les remplacer que par une piece portant le numero specifie

The components identified by ✖ in this manual have been carefully factory-selected for each set in order to satisfy regulations regarding X-ray radiation
Should replacement be required, replace only with the value originally used

REF NO	PART NO.	DESCRIPTION				REMARK
R272	1-249-411-11	CARBON	330	5%	1/4W	
R273	1-249-411-11	CARBON	330	5%	1/4W	
R276	1-249-417-11	CARBON	1K	5%	1/4W	
R301	1-216-065-00	METAL GLAZE	4.7K	5%	1/10W	
R302	1-216-057-91	METAL GLAZE	2.2K	5%	1/10W	
R311	1-216-678-91	METAL CHIP	13K	0.50%	1/10W	
R312	1-216-079-00	METAL GLAZE	18K	5%	1/10W	
R313	1-216-653-11	METAL CHIP	1.2K	0.50%	1/10W	
R314	1-216-117-00	METAL GLAZE	680K	5%	1/10W	
R315	1-216-051-00	METAL GLAZE	1.2K	5%	1/10W	
R319	1-216-295-00	METAL GLAZE	0	5%	1/10W	
R320	1-216-295-00	METAL GLAZE	0	5%	1/10W	
R321	1-216-295-00	METAL GLAZE	0	5%	1/10W	
R322	1-216-295-00	METAL GLAZE	0	5%	1/10W	
R323	1-216-121-00	METAL GLAZE	1M	5%	1/10W	
R324	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R326	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R327	1-216-077-00	METAL GLAZE	15K	5%	1/10W	
R328	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R329	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R330	1-216-067-91	METAL GLAZE	5.6K	5%	1/10W	
R331	1-216-093-00	METAL GLAZE	68K	5%	1/10W	
R334	1-249-417-11	CARBON	1K	5%	1/4W	F
R335	1-216-049-00	METAL GLAZE	1K	5%	1/10W	
R336	1-216-121-00	METAL GLAZE	1M	5%	1/10W	
R338	1-216-049-00	METAL GLAZE	1K	5%	1/10W	
R339	1-216-045-00	METAL GLAZE	680	5%	1/10W	
R341	1-216-687-11	METAL CHIP	33K	0.50%	1/10W	
R343	1-216-071-00	METAL GLAZE	8.2K	5%	1/10W	
R345	1-249-429-11	CARBON	10K	5%	1/4W	
R346	1-249-421-11	CARBON	2.2K	5%	1/4W	
R347	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R351	1-216-085-00	METAL GLAZE	33K	5%	1/10W	
R356	1-216-049-00	METAL GLAZE	1K	5%	1/10W	
R357	1-216-089-91	METAL GLAZE	47K	5%	1/10W	
R358	1-216-091-00	METAL GLAZE	56K	5%	1/10W	
R360	1-216-041-00	METAL GLAZE	470	5%	1/10W	
R361	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R363	1-216-295-00	METAL GLAZE	0	5%	1/10W	
R364	1-216-295-00	METAL GLAZE	0	5%	1/10W	
R365	1-216-295-00	METAL GLAZE	0	5%	1/10W	
R367	1-216-109-91	METAL GLAZE	330K	5%	1/10W	
R403	1-216-022-00	METAL GLAZE	75	5%	1/10W	
R404	1-216-295-00	METAL GLAZE	0	5%	1/10W	
R405	1-216-113-00	METAL GLAZE	470K	5%	1/10W	
R406	1-216-113-00	METAL GLAZE	470K	5%	1/10W	
R409	1-216-295-00	METAL GLAZE	0	5%	1/10W	
R410	1-216-022-00	METAL GLAZE	75	5%	1/10W	
R411	1-216-113-00	METAL GLAZE	470K	5%	1/10W	
R412	1-216-113-00	METAL GLAZE	470K	5%	1/10W	
R413	1-216-295-00	METAL GLAZE	0	5%	1/10W	
R414	1-216-041-00	METAL GLAZE	470	5%	1/10W	
R415	1-216-041-00	METAL GLAZE	470	5%	1/10W	
R429	1-216-295-00	METAL GLAZE	0	5%	1/10W	
R430	1-216-295-00	METAL GLAZE	0	5%	1/10W	
R441	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R442	1-216-049-00	METAL GLAZE	1K	5%	1/10W	
R443	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R444	1-216-049-00	METAL GLAZE	1K	5%	1/10W	
R445	1-216-049-00	METAL GLAZE	1K	5%	1/10W	
R447	1-216-049-00	METAL GLAZE	1K	5%	1/10W	
R448	1-249-417-11	CARBON	1K	5%	1/4W	
R449	1-216-049-00	METAL GLAZE	1K	5%	1/10W	
R450	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R452	1-249-417-11	CARBON	1K	5%	1/4W	
R453	1-216-049-00	METAL GLAZE	1K	5%	1/10W	
R454	1-216-049-00	METAL GLAZE	1K	5%	1/10W	
R456	1-216-295-00	METAL GLAZE	0	5%	1/10W	
R457	1-216-295-00	METAL GLAZE	0	5%	1/10W	
R458	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R459	1-216-295-00	METAL GLAZE	0	5%	1/10W	
R469	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R471	1-216-295-00	METAL GLAZE	0	5%	1/10W	
R472	1-216-049-00	METAL GLAZE	1K	5%	1/10W	
R473	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R474	1-216-295-00	METAL GLAZE	0	5%	1/10W	
R475	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R505 ⚠	1-216-349-91	METAL OXIDE	1	5%	1W	F
R506 ⚠	1-216-429-91	METAL OXIDE	270	5%	1W	F
R507	1-247-887-00	CARBON	220K	5%	1/4W	
R508	1-216-049-00	METAL GLAZE	1K	5%	1/10W	
R509	1-216-101-00	METAL GLAZE	150K	5%	1/10W	
R510	1-216-055-00	METAL GLAZE	1.8K	5%	1/10W	
✖R511 ⚠		METAL			1/10W	
R512	1-215-445-00	METAL	10K	1%	1/4W	
R513	1-216-645-11	METAL CHIP	560	0.50%	1/10W	
R515	1-216-673-91	METAL CHIP	8.2K	0.50%	1/10W	
R517	1-216-699-11	METAL CHIP	100K	0.50%	1/10W	
R518	1-215-431-00	METAL	2.7K	1%	1/4W	
R519	1-215-427-00	METAL	1.8K	1%	1/4W	
R530	1-249-419-11	CARBON	1.5K	5%	1/4W	
R531 ⚠	1-216-357-91	METAL OXIDE	4.7	5%	1W	F
R532 ⚠	1-215-882-91	METAL OXIDE	22	5%	2W	F
R533 ⚠	1-216-359-91	METAL OXIDE	6.8	5%	1W	F
R534	1-249-393-11	CARBON	10	5%	1/4W	F
R535 ⚠	1-249-389-91	CARBON	4.7	5%	1/4W	F
✖R537 ⚠		METAL			1/10W	
R538	1-249-441-11	CARBON	100K	5%	1/4W	
R541	1-249-416-11	CARBON	820	5%	1/4W	F
R542 ⚠	1-215-870-91	METAL OXIDE	1.5K	5%	1W	F
R549 ⚠	1-216-369-91	METAL OXIDE	1	5%	2W	F
R554	1-216-061-00	METAL GLAZE	3.3K	5%	1/10W	
R555 ⚠	1-215-897-91	METAL OXIDE	6.8K	5%	2W	F
R558	1-260-326-71	CARBON	680	5%	1/2W	
R559 ⚠	1-215-864-91	METAL OXIDE	150	5%	1W	F
R681 ⚠	1-215-883-91	METAL OXIDE	33	5%	2W	F
R682	1-249-415-11	CARBON	680	5%	1/4W	
R683 ⚠	1-216-356-91	METAL OXIDE	3.3	5%	1W	F
R684 ⚠	1-216-380-91	METAL OXIDE	8.2	5%	2W	F

<SWITCH>

S001	1-571-532-21	SWITCH, TACTIL (POWER)
S002	1-571-532-21	SWITCH, TACTIL (CHANNEL +)
S003	1-571-532-21	SWITCH, TACTIL (CHANNEL -)
S004	1-571-532-21	SWITCH, TACTIL (VOLUME +)
S005	1-571-532-21	SWITCH, TACTIL (VOLUME -)
S006	1-571-532-21	SWITCH, TACTIL (TV/VIDEO)

<TRANSFORMER>

T504 ⚠	1-453-142-11	TRANSFORMER ASSY, FLYBACK (KX-1702A5)
T551	1-437-195-11	TRANSFORMER, HORIZONTAL DRIVE

<TUNER>

TU101⚠	8-598-039-00	TUNER BTF-WA401

Downloaded from www.Manualslib.com manuals search engine

A G

Les composants identifies par une trame et une marque ⚠ sont critiques pour la securite
Ne les remplacer que par une piece portant le numero specifie

The components identified by shading and mark ⚠ are critical for safety
Replace only with part number specified

REF NO	PART NO.	DESCRIPTION			REMARK
		<CRYSTAL>			
X001	1-579-917-21	VIBRATOR, CRYSTAL			
X301	1-567-505-11	OSCILLATOR, CRYSTAL 3.58MHZ			
**********					
	*A-1316-147-A	G BOARD, COMPLETE **********			
	4-382-854-11	SCREW (M3X10), P, SW (+)			
		<CAPACITOR>			
C601	⚠ 1-136-311-51	FILM	0.47MF	20%	125V
C603	1-124-478-11	ELECT	100MF	20%	25V
C604	⚠ 1-162-677-51	CERAMIC	470PF	10%	125V
C605	⚠ 1-162-677-51	CERAMIC	470PF	10%	125V
C606	⚠ 1-102-050-51	CERAMIC	0.01MF		500V
C607	⚠ 1-102-050-51	CERAMIC	0.01MF		500V
C613	1-104-759-11	ELECT	470MF	20%	200V
C614	1-104-759-11	ELECT	470MF	20%	200V
C615	1-164-625-11	CERAMIC	680PF	10%	500V
C616	1-136-169-00	FILM	0.22MF	5%	50V
C617	1-136-169-00	FILM	0.22MF	5%	50V
C618	1-164-625-11	CERAMIC	680PF	10%	500V
C619	1-164-625-11	CERAMIC	680PF	10%	500V
C620	1-136-601-11	FILM	0.01MF	10%	630V
C621	1-129-744-91	FILM	0.027MF	10%	400V
C622	1-124-478-11	ELECT	100MF	20%	25V
C623	1-124-360-00	ELECT	1000MF	20%	16V
C624	1-124-557-11	ELECT	1000MF	20%	25V
C626	1-123-024-21	ELECT	33MF		160V
C627	1-136-601-11	FILM	0.01MF	10%	630V
C629	1-106-355-12	MYLAR	0.0033MF	10%	200V
C630	1-124-907-11	ELECT	10MF	20%	50V
C631	1-136-169-00	FILM	0.22MF	5%	50V
C632	1-136-169-00	FILM	0.22MF	5%	50V
C633	⚠ 1-162-677-51	CERAMIC	470PF	10%	125V
C634	⚠ 1-162-677-51	CERAMIC	470PF	10%	125V
C635	1-106-365-00	MYLAR	0.0082MF	10%	100V
C636	1-162-318-11	CERAMIC	0.001MF	10%	500V
C637	1-164-735-11	CAP, CERAMIC 1500PF			
C638	1-164-735-11	CAP, CERAMIC 1500PF			
C639	1-164-735-11	CAP, CERAMIC 1500PF			
C640	1-164-735-11	CAP, CERAMIC 1500PF			
		<CONNECTOR>			
CN601	*1-580-843-11	PIN, CONNECTOR (POWER)			
CN602	1-508-786-00	PIN, CONNECTOR (5MM PITCH) 2P			
CN603	1-508-786-00	PIN, CONNECTOR (5MM PITCH) 2P			
CN604	1-564-510-11	PLUG, CONNECTOR 7P			
CN605	*1-691-135-11	PIN, CONNECTOR (PC BOARD) 4P			
CN606	1-564-505-11	PLUG, CONNECTOR 2P			
		<DIODE>			
D604	8-719-911-19	DIODE 1SS119			
D606	⚠ 8-719-510-63	DIODE D4SB60L-F			
D607	8-719-510-48	DIODE D1N20R			
D608	8-719-510-48	DIODE D1N20R			
D609	8-719-510-48	DIODE D1N20R			
D610	8-719-510-48	DIODE D1N20R			
D611	8-719-032-13	DIODE D1NS6-TA2			
D612	8-719-510-02	DIODE D1NS4			
D613	8-719-510-02	DIODE D1NS4			
D614	8-719-510-02	DIODE D1NS4			
D615	8-719-510-02	DIODE D1NS4			
D616	8-719-510-26	DIODE D1NL20			
D617	8-719-510-26	DIODE D1NL20			
D618	8-719-510-26	DIODE D1NL20			
D619	8-719-510-26	DIODE D1NL20			
D620	8-719-510-02	DIODE D1NS4			
D621	8-719-510-02	DIODE D1NS4			
D622	8-719-510-48	DIODE D1N20R			
D624	8-719-911-19	DIODE 1SS119			
D625	8-719-911-19	DIODE 1SS119			
D626	8-719-110-14	DIODE RD9.1ESB3			
D627	8-719-911-19	DIODE 1SS119			
D629	8-719-911-19	DIODE 1SS119			
D633	8-719-510-48	DIODE D1N20R			
		<FUSE>			
F601	⚠ 1-532-748-11	FUSE, GLASS TUBE 6.3A/125V			
	1-533-223-11	CLIP, FUSE; F601			
		<FERRITE BEAD>			
FB601	1-412-911-11	INDUCTOR, FERRITE BEAD			
FB602	1-412-911-11	INDUCTOR, FERRITE BEAD			
FB603	1-412-911-11	INDUCTOR, FERRITE BEAD			
FB604	1-412-911-11	INDUCTOR, FERRITE BEAD			
FB605	1-410-396-41	FERRITE BEAD INDUCTOR 0.45UH			
FB606	1-410-396-41	FERRITE BEAD INDUCTOR 0.45UH			
FB607	1-410-396-41	FERRITE BEAD INDUCTOR 0.45UH			
FB608	1-410-396-41	FERRITE BEAD INDUCTOR 0.45UH			
FB609	1-410-396-41	FERRITE BEAD INDUCTOR 0.45UH			
		<IC>			
IC602	⚠ 1-810-050-11	POWER MODULE D8-47			
		<COIL>			
L601	1-412-533-61	INDUCTOR	47UH		
		<TRANSISTOR>			
Q602	8-729-119-78	TRANSISTOR 2SC2785-HFE			
Q603	8-729-016-15	TRANSISTOR 2SC4833MNP			
Q604	8-729-016-15	TRANSISTOR 2SC4833MNP			
Q605	8-729-924-90	TRANSISTOR 2SB1370-EF			
Q606	8-729-119-78	TRANSISTOR 2SC2785-HFE			
Q607	8-729-924-90	TRANSISTOR 2SB1370-EF			
		<RESISTOR>			
R602	1-249-421-11	CARBON	2.2K	5%	1/4W F
R604	1-249-421-11	CARBON	2.2K	5%	1/4W
R608	1-247-893-11	CARBON	390K	5%	1/4W
R609	1-247-893-11	CARBON	390K	5%	1/4W
R610	⚠ 1-202-933-61	FUSIBLE	0.1	10%	1/2W F
R612	⚠ 1-216-349-71	METAL OXIDE	1	5%	1W F
R613	⚠ 1-216-349-71	METAL OXIDE	1	5%	1W F

Downloaded from www.Manualslib.com manuals search engine

G C

The components identified by shading and mark ⚠ are critical for safety
Replace only with part number specified

Les composants identifies par une trame et une marque ⚠ sont critiques pour la securite
Ne les remplacer que par une piece portant le numero specifie

REF NO.	PART NO.	DESCRIPTION				REMARK
R614	⚠1-215-904-71	METAL OXIDE	100K	5%	2W	F
R615	⚠1-215-904-71	METAL OXIDE	100K	5%	2W	F
R616	⚠1-215-858-71	METAL OXIDE	15	5%	1W	F
R617	⚠1-215-858-71	METAL OXIDE	15	5%	1W	F
R618	⚠1-212-855-61	FUSIBLE	8.2	5%	1/4W	F
R619	1-212-853-61	FUSIBLE	6.8	5%	1/4W	F
R620	⚠1-249-379-91	CARBON	0.68	5%	1/4W	F
R621	⚠1-249-377-91	CARBON	0.47	5%	1/4W	F
R622	⚠1-249-377-91	CARBON	0.47	5%	1/4W	F
R623	⚠1-249-377-91	CARBON	0.47	5%	1/4W	F
R624	1-249-425-11	CARBON	4.7K	5%	1/4W	F
R625	⚠1-215-864-71	METAL OXIDE	150	5%	1W	F
R627	⚠1-249-377-91	CARBON	0.47	5%	1/4W	F
R628	1-249-435-11	CARBON	33K	5%	1/4W	
R630	⚠1-249-377-91	CARBON	0.47	5%	1/4W	F
R631	⚠1-249-377-91	CARBON	0.47	5%	1/4W	F
R632	⚠1-249-377-91	CARBON	0.47	5%	1/4W	F
R633	1-249-388-11	CARBON	3.9	5%	1/4W	F
R636	1-249-421-11	CARBON	2.2K	5%	1/4W	
R637	1-249-407-11	CARBON	150	5%	1/4W	F
R639	⚠1-202-892-91	SOLID	6.7K	20%	3/2W	
R640	1-249-414-11	CARBON	560	5%	1/4W	
R642	1-249-421-11	CARBON	2.2K	5%	1/4W	
R643	⚠1-215-863-71	METAL OXIDE	100	5%	1W	F
R645	⚠1-212-855-61	FUSIBLE	8.2	5%	1/4W	F
R646	⚠1-216-425-71	METAL OXIDE	18	5%	1W	F
R647	⚠1-216-425-71	METAL OXIDE	56	5%	1W	F
R648	1-249-421-11	CARBON	2.2K	5%	1/4W	
R649	1-249-417-11	CARBON	1K	5%	1/4W	
R650	1-249-417-11	CARBON	1K	5%	1/4W	
R651	1-249-425-11	CARBON	4.7K	5%	1/4W	
R652	1-249-411-11	CARBON	330	5%	1/4W	
R653	1-249-417-11	CARBON	1K	5%	1/4W	
R654	1-249-414-11	CARBON	560	5%	1/4W	
R655	1-249-441-11	CARBON	100K	5%	1/4W	

<RELAY>

RY601	⚠1-515-684-31	RELAY	
RY602	1-515-684-31	RELAY	

<TRANSFORMER>

T601	⚠1-423-585-11	TRANSFORMER, LINE FILTER (LPF)	
T602	⚠1-423-585-11	TRANSFORMER, LINE FILTER (LPF)	
T603	⚠1-423-563-11	TRANSFORMER, CONVERTER DRIVE	
T604	1-423-582-11	TRANSFORMER, FERRITE (SBT)	
T605	⚠1-423-564-11	TRANSFORMER, CONVERTER (PIT)	

<THERMISTOR>

THM601	⚠1-808-686-33	THERMISTOR (POSITIVE)	

<VARISTOR>

VDR601	1-810-052-21	VARISTOR	
VDR602	1-810-052-21	VARISTOR	

****

	*A-1331-247-A	C BOARD, COMPLETE	
		**********	
	*4-374-912-01	COVER (MAIN), CV VOL	
	*4-374-913-01	COVER (REAR LID), CV VOL	

REF.NO.	PART NO	DESCRIPTION				REMARK

<CAPACITOR>

C701	1-136-601-11	FILM	0.01MF	10%	630V	
C704	1-162-116-00	CERAMIC	680PF	10%	2KV	
C706	1-124-916-11	ELECT	22MF	20%	25V	
C712	1-164-082-11	CERAMIC	560PF	10%	50V	
C732	1-164-081-11	CERAMIC	470PF	10%	50V	
C752	1-164-081-11	CERAMIC	470PF	10%	50V	
C771	1-164-083-11	CERAMIC	680PF	10%	50V	
C772	1-164-083-11	CERAMIC	680PF	10%	50V	
C773	1-164-083-11	CERAMIC	680PF	10%	50V	

<CONNECTOR>

CN701	1-695-915-11	TAB (CONTACT)	
CN702	*1-508-768-00	PIN, CONNECTOR (5MM PITCH) 6P	
CN703	*1-564-509-11	PLUG, CONNECTOR 6P	

<DIODE>

D770	8-719-911-19	DIODE 1SS119	
D771	8-719-911-19	DIODE 1SS119	
D772	8-719-911-19	DIODE 1SS119	
D773	8-719-911-19	DIODE 1SS119	
D777	8-719-109-71	DIODE RD3 9ESB1	
D790	8-719-911-19	DIODE 1SS119	
D791	8-719-911-19	DIODE 1SS119	
D792	8-719-911-19	DIODE 1SS119	

<JACK>

J701	⚠1-526-819-11	SOCKET, PICTURE TUBE	

<COIL>

L701	1-410-478-11	INDUCTOR	47UH

<TRANSISTOR>

Q711	8-729-926-73	TRANSISTOR 2SC3271F-N	
Q731	8-729-926-73	TRANSISTOR 2SC3271F-N	
Q751	8-729-926-73	TRANSISTOR 2SC3271F-N	
Q770	8-729-119-76	TRANSISTOR 2SA1175-HFE	
Q771	8-729-200-17	TRANSISTOR 2SA1091-O	
Q772	8-729-200-17	TRANSISTOR 2SA1091-O	
Q773	8-729-200-17	TRANSISTOR 2SA1091-O	

<RESISTOR>

R700	1-202-549-00	SOLID	100	20%	1/2W	
R702	1-202-846-00	SOLID	470K	20%	1/2W	
R703	1-202-838-00	SOLID	100K	20%	1/2W	
R704	⚠1-216-367-71	METAL OXIDE	0.68	5%	2W	F
R706	1-202-842-11	SOLID	220K	20%	1/2W	
R707	1-202-846-00	SOLID	470K	20%	1/2W	
R708	1-202-719-00	SOLID	1M	20%	1/2W	
R710	1-202-824-00	SOLID	3.3K	20%	1/2W	
R711	1-249-405-11	CARBON	100	5%	1/4W	
R712	⚠1-215-924-91	METAL OXIDE	15K	5%	3W	F
R716	1-249-412-11	CARBON	390	5%	1/4W	
R717	1-249-393-11	CARBON	10	5%	1/4W	
R730	1-202-824-00	SOLID	3.3K	20%	1/2W	
R731	1-249-405-11	CARBON	100	5%	1/4W	
R732	⚠1-215-924-91	METAL OXIDE	15K	5%	3W	F

Downloaded from www.Manualslib.com manuals search engine

C S

Les composants identifies par une trame et une marque ⚠ sont critiques pour la securite
Ne les remplacer que par une piece portant le numero specifie

The components identified by shading and mark ⚠ are critical for safety
Replace only with part number specified

REF NO	PART NO	DESCRIPTION				REMARK
R736	1-249-412-11	CARBON	390	5%	1/4W	
R737	1-249-393-11	CARBON	10	5%	1/4W	
R750	1-202-824-00	SOLID	3.3K	20%	1/2W	
R751	1-249-405-11	CARBON	100	5%	1/4W	
R752	1-215-824-91	METAL OXIDE	15K	5%	2W	?
R756	1-249-412-11	CARBON	390	5%	1/4W	
R757	1-249-393-11	CARBON	10	5%	1/4W	
R770	1-249-437-11	CARBON	47K	5%	1/4W	
R771	1-249-409-11	CARBON	220	5%	1/4W	
R772	1-249-409-11	CARBON	220	5%	1/4W	
R773	1-249-409-11	CARBON	220	5%	1/4W	
R774	1-249-437-11	CARBON	47K	5%	1/4W	
R775	1-249-417-11	CARBON	1K	5%	1/4W	
R776	1-249-409-11	CARBON	220	5%	1/4W	
R790	1-249-417-11	CARBON	1K	5%	1/4W	
R791	1-249-413-11	CARBON	470	5%	1/4W	

<VARIABLE RESISTOR>

RV701 ⚠	1-230-619-11	RES, ADJ, METAL GLAZE 110K (H STAT)	
RV702	1-230-641-11	RES, ADJ, METAL GLAZE 2 2M (SCREEN)	
RV703	1-230-641-11	RES, ADJ, METAL GLAZE 2 2M (FOCUS)	

****

*1-646-641-12 S BOARD
****

<CAPACITOR>

C805	1-124-903-11	ELECT	1MF	20%	50V
C806	1-137-399-11	FILM	0.1MF	5%	50V
C807	1-102-157-00	CERAMIC	560PF	10%	500V
C809	1-137-367-11	FILM	0.0033MF	5%	50V
C810	1-137-399-11	FILM	0.1MF	5%	50V
C811	1-137-399-11	FILM	0.1MF	5%	50V
C812	1-137-375-11	FILM	0.068MF	5%	50V
C813	1-124-907-11	ELECT	10MF	20%	50V
C814	1-124-907-11	ELECT	10MF	20%	50V
C815	1-124-907-11	ELECT	10MF	20%	50V
C816	1-124-907-11	ELECT	10MF	20%	50V
C817	1-124-907-11	ELECT	10MF	20%	50V
C819	1-164-070-11	CERAMIC	100PF	5%	50V

<CONNECTOR>

CN801	1-573-979-21	CONNECTOR, BOARD TO BOARD 11P

<DIODE>

D800	8-719-911-19	DIODE 1SS119

<IC>

IC801	8-759-084-09	IC Z8612812PSC

<COIL>

L801	1-410-470-11	INDUCTOR	10UH

<TRANSISTOR>

Q801	8-729-119-78	TRANSISTOR 2SC2785-HFE
Q802	8-729-119-78	TRANSISTOR 2SC2785-HFE

<RESISTOR>

R801	1-249-416-11	CARBON	820	5%	1/4W
R802	1-249-416-11	CARBON	820	5%	1/4W
R803	1-249-416-11	CARBON	820	5%	1/4W
R804	1-249-425-11	CARBON	4.7K	5%	1/4W
R805	1-249-425-11	CARBON	4.7K	5%	1/4W
R806	1-249-423-11	CARBON	3.3K	5%	1/4W
R807	1-249-425-11	CARBON	4.7K	5%	1/4W
R808	1-249-417-11	CARBON	1K	5%	1/4W
R809	1-249-441-11	CARBON	100K	5%	1/4W
R810	1-249-437-11	CARBON	47K	5%	1/4W
R812	1-249-417-11	CARBON	1K	5%	1/4W
R813	1-249-417-11	CARBON	1K	5%	1/4W
R814	1-249-413-11	CARBON	470	5%	1/4W
R815	1-249-427-11	CARBON	6.8K	5%	1/4W
R816	1-249-429-11	CARBON	10K	5%	1/4W
R817	1-249-433-11	CARBON	22K	5%	1/4W
R818	1-249-417-11	CARBON	1K	5%	1/4W
R820	1-249-433-11	CARBON	22K	5%	1/4W
R821	1-249-433-11	CARBON	22K	5%	1/4W
R822	1-249-429-11	CARBON	10K	5%	1/4W

****

MISCELLANEOUS
****

⚠	1-420-146-21	COIL, DEMAGNETIZATION
⚠	1-451-249-31	DEFLECTION YOKE (Y14KB4A2)
SP901	1-504-252-11	SPEAKER (8X5CM)
SP902	1-504-252-11	SPEAKER (9X5CM)
	1-573-657-11	PLUG, F-PIN
⚠	1-751-057-21	CORD, POWER (WITH CONNECTOR) 10A/125V
⚠	8-735-555-05	PICTURE TUBE (A34JBE10X)

****

ACCESSORIES AND PACKING MATERIALS
****

1-417-182-11	CONVERTER (EAC-25)
3-756-904-24	MANUAL, INSTRUCTION (ENGLISH)
3-756-904-34	MANUAL, INSTRUCTION (FRENCH)
3-756-904-44	MANUAL, INSTRUCTION (SPANISH)
1-501-372-41	ANTENNA, TELESCOPIC
*4-040-844-01	INDIVIDUAL CARTON
*4-041-253-01	BAG, PROTECTION
*4-041-353-01	CUSHION (UPPER) (ASSY)
*4-041-354-01	CUSHION (LOWER) (ASSY)

REMOTE COMMANDER

1-466-966-11	REMOTE COMMANDER (RM-Y116)
9-903-826-01	COVER, BATTERY (FOR RM-Y116)

English
93GJ0947-1
Printed in U S A
© 1993 7

9-964-958-01

Sony Corporation
TV Group

Downloaded from www.Manualslib.com manuals search engine